 


**Attention**

Please read the operating manual prior to operating the machine for the first time.

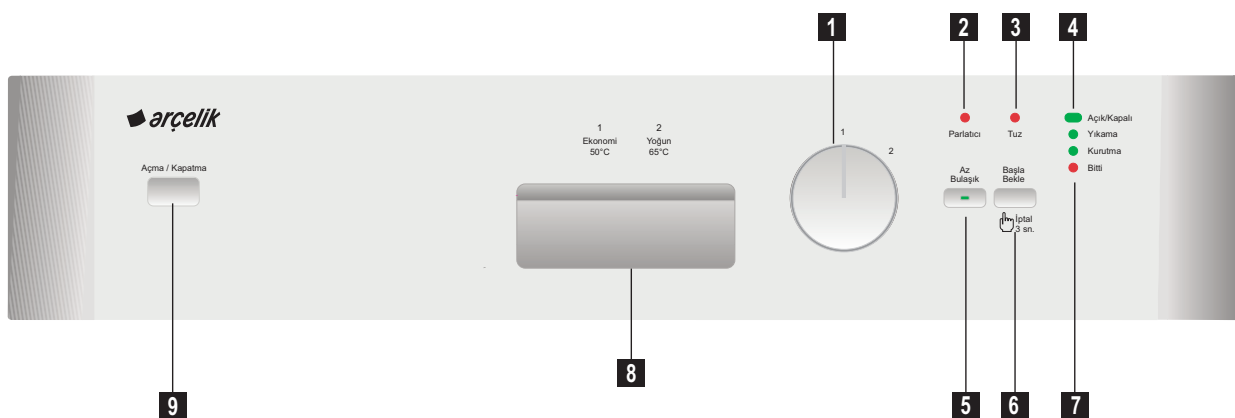

- 1 Programme selection knob
- 2 Rinse-aid level indicator light
- 3 Salt Level Indicator light
- 4 On/Off indicator light
- 5 Half Load
- 6 Start/Pause button
- 7 LED progress indicator lights
- 8 Door handle
- 9 On/Off Button

**How to use your dishwasher:**

- Open the water tap.
- Plug to the mains.
- Open the door and load the dishwasher. Check if both upper and lower spray arms move freely.
- Fill enough detergent into the detergent dispenser and close the door.
- Use the on / off button to turn the machine on.
- Check the salt and rinse aid level indicator lights (depends on the model). If necessary, refill salt and/or rinse aid.
- Use the program selection knob to choose your washing program.

- Start the program with the Start/Pause button:

**Attention**

Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. When the door is closed, the program will continue.

- Use the on / off button to turn the machine off again. When the progress indicator light "program end" lights up, the program is complete.
- Close the water tap. Pull out the plug.
- Allow your dishes to cool for 15 minutes, with the door open. Unload the dishes. Begin with the lower basket.

**PROGRAM TABLE**

Program number	1 Reference **	2
Program name	<b>Ekonomi Eco</b>	<b>Süper Intensive</b>
Cleaning temperature	<b>50°C</b>	<b>70°C</b>
Suited to	Normally dirty dishes with starch containing food leftovers which are not dried on	Especially dirty dishes with food leftovers which are dried on
Degree of dirtiness	Medium	High
Detergents		
15 cm <sup>3</sup>	-	-
15-25 cm <sup>3</sup>	x	x
+ 5 cm <sup>3</sup>	x	x
Program process	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot rinse ▼ Dry ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot rinse ▼ Dry ▼ End
Duration (min)	136	115
Energy (kWh)	1,05	1,67
Water (l)	15	17,5

The consumption values shown in the table were determined under standard conditions. For this reason, deviations are possible under practical conditions.

\*\* Reference program for test institutes

The tests in accordance with EN 50242 must be carried out with a full salt container of the water softener, a full reservoir for the rinse aid and the testing program.

## Function buttons



### On/off button

You turn your dishwasher on / off with this button. When turning on, the indicator light for the last used program will light up.



### Start/Pause button

You use this button to start the selected program; the light on the button lights up. Stop the program with the start / pause button if you would like to open the door once the dishwasher's washing program is running.



### Program selection Knob

Use the program selection Knob to choose your washing program.

### How to cancel the washing program


To cancel a program while the machine is operating: Press start/stop button for 3 seconds. The machine will drain the water inside the machine for 45 seconds. The program is cancelled when washing light goes off. Then, you can choose and start a new program.

**! Important:** Depending on the stage of the program you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before washing properly.

### How to change the washing program

To change the program selection while the machine is operating: Press start/stop button. The washing light will go off. Select the new program. Press start/stop button. The washing light will be on and new program will start.

**! Important:** The new program will NOT start from the beginning. It will start from the stage last carried out by the previous program selection.

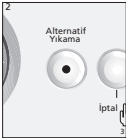


### Half Load (1/2) button


When there are few dishes, you press this button after pressing the programme selection button. When turning the dishwasher on, the indicator light on the button lights up. This function helps you to save water and energy.

## Control indicator lights

### 2 Rinse aid level indicator light

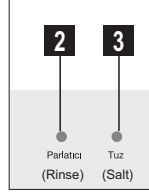


You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.

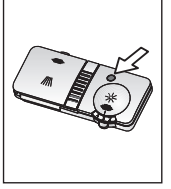


When the colour is light, open the dispenser and refill rinse aid.

### 3 Salt level indicator light

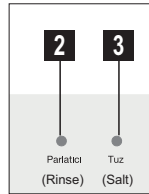


When this indicator light comes on, you must refill special salt. In machines which do not possess an electrical salt indicator, the salt content can be read on the container for the salt. When the visual fill indicator is dark, there is enough salt in the container.

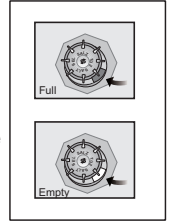

When the colour is light, open the container and add dishwasher salt.

### 7 LED progress indicator lights

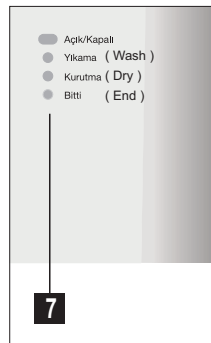

The program sequence throughout the washing process can be monitored from the progress indicator lights on the control panel.

⚠ Following the washing stage, in order to drain and remove water from inside the machine completely, the machine will pause for approximately 35 minutes. Do not worry this is not a fault. Then End progress indicator light will come on.

⚠ Do not switch the machine off before End light comes on.