

TABLE OF CONTENTS

- Important Information 1**
 - 1.1 Cleaning the screen and cabinet... 1
 - 1.2 Disposing of your TV at the end of service life..... 1
- Features of your new television 2**
 - 2.1-Special Features 2
- Important Safety Instructions..... 3**
- Start..... 6**
 - 4.1-Antenna connection 6
 - 4.2-Powering on your device and the initial use 6
 - 4.3-Batteries 6
- Your new television 7**
 - 5.1-TV Control Panel..... 7
 - 5.2-External Connections 8
 - 5.3-Remote Control 9
- Performing the initial power-on settings..... 10**
 - 6.1-TV controls 10
 - 6.2-Turning on the TV and Setting the Channels 11
 - 6.3-Program Table 13
- Settings of Your New Television 14**
 - 7.1- Sound Menu Settings 14
 - 7.2-Picture Menu Settings..... 15
 - 7.3-Features Menu Settings 17
 - 7.4-Other Picture Features 18
- Teletext..... 19**
- External equipment connection 21**
- Help and tips 26**
- Technical specifications chart 27**

1 Important Information

LCD panels are produced with state-of-the-art technology. However, there may be black or lit spots on the screen under certain circumstances. That does not mean that the product is faulty.

1.1 Cleaning the screen and cabinet...

After powering off, wipe the screen and the cabinet clean with a soft and dry cloth. We recommend that you do not use patented polishes or solvents to clean the screen or cabinet since they may cause damage.

1.2 Disposing of your TV at the end of service life...

The cold cathode fluorescent lamp found in your LCD screen contains a very small amount of mercury. Once your TV set has completed its physical life, please dispose of it in accordance with local government regulations or leave it at a recycling centre.

2 Features of your new television

We would like this product, which has been manufactured in modern facilities in accordance with total quality principles, to offer you the best performance. Therefore, we would like you to read this entire manual carefully before you use your product and keep it for future reference.

2.1-Special Features

- Full HD feature
- HD-Ready
- 2 HDMI 1.3 connection input
- HDCP feature
- PAT (Picture and Teletext)
- Compatible with cable broadcasts
- Wide angle of vision
- Scart and AV connection
- S-VHS and Cinch inputs for S-Video connection
- PC connection
- Low energy consumption
- AVL
- Programmable power on
- Programmable power off
- Toptext (*)
- SRS TruSurround sound
- Graphic equalizer
- Sharpness feature in Color Transitions (CTI)
- Sharpness feature and picture resolution (LTI) in black-white transitions
- A clearer Picture made possible with a Digital Comb Filter
- DNR Noise reduction
- Returning to the last viewed program by single button (SWAP)
- Manual Fine Tuning
- 100 Program memory
- Infrared remote control equipped with all functions
- Parental Control
- Panel Lock
- Renaming, deleting, skipping and relocating the programs.
- Automatic broadcast detecting system by means of WSS feature
- Feature of viewing the NTSC broadcast via Scart input
- Easy performance of the processes with the advanced menu system
- Multilanguage menu option
- 4:3, 16:9, 14:9 Letterbox, Subtitle picture formats



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

(*): These features are optional and they are not available on all models.

3 Important Safety Instructions

 


This symbol is used to warn the user about the “dangerous voltage” contained inside the housing of the product that may create a risk of electrical shock.




This symbol is used to remind the user important usage and service instructions supplied with the device.

- 1) Please **READ** the operating instructions before using the device for the first time.
- 2) Please observe the instructions contained in the Operating Instructions.
- 3) Please consider all warnings.
- 4) **MAKE SURE** that all power connections (extension cables and the connections between the device components) have been made properly and in accordance with the manufacturer's instructions. Before making or changing the connections, power off the device and unplug the mains connection plug.
- 5) If you have any doubts regarding the installation, operation or safety of the device, please **REFER** to the vendor.
- 6) **BE CAREFUL** with glass panels and covers on the device. The screen glass may break and cause serious injuries if something hits it.
- 7) To ensure adequate ventilation, please leave a clearance area of at least 10 cm around the television. This clearance prevents the TV from overheating and consequently causing damage.
 - Using the device in dusty environments should also be avoided.
 - Never block the slots and openings by placing the TV on a bed, sofa, pillow or other similar surfaces.

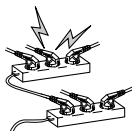

 
- Never install the TV into closed places such as bookcases or cabinets unless adequate ventilation is provided.

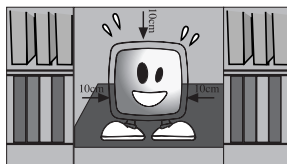


- 8) **DO NOT COVER** the ventilation openings of the device with items such as newspapers, table-clothes, curtains, etc. Overheating causes damage and shortens the service life of the device.



 - 9) Your TV may be damaged if you place it under direct sunshine or close to a heater. Please abstain from using the product in very hot or humid locations or in places where the temperature is likely to decrease below 5°C (41°F). **DO NOT PLACE** on or near the device any hot objects or items with open flame such as candles or any night lamps. The high temperature can melt plastic parts and cause a fire.

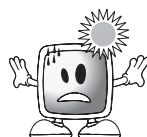

 - 10) Never operate electrical devices close to water. Operating such devices, for example, near a bathtub, washbasin, kitchen washbasin, washing basin, wet basement and swimming pool can cause fire or electric shock.



- Do not allow your TV to get wet. Never pour any liquids onto the TV. Do not operate your TV if any solid or liquid substance enters into it. This can cause electric shock and your TV may be damaged. Have it checked immediately by qualified personnel.



- Keep open flame sources (such as candles) away from TV in order to avoid risk of fire.

 


11) DO NOT USE

headphones at extremely high volume levels since this may cause permanent loss of hearing.



- 12) Operate your TV only in the 220-240V ~ 50-60Hz voltage range. Use the AC power cable supplied with the product. If your TV is a grounded (Class I) product, then it must certainly be connected to a grounded socket.

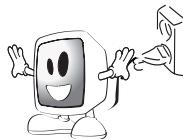

- The socket into which you plug in the AC power cable or the adaptor must be within easy reach.**
- Turn off your device with the ON/OFF button and then unplug it in order to disconnect it from mains.**

Note 1: If you would like to operate your television by means of the lighter cable in a car, then use the cable supplied with the product. Using a different cable may damage your appliance.

Note 2: If your device has an adaptor, then use the adaptor and AC power cable supplied with your product. Do not use defective sockets. Make sure that the plug is firmly inserted into the socket. If the plug remains loose, then it can cause fire due to arcing. Refer to an electrician to have your socket replaced.

- 13) Make sure that the power cable is not stepped on and that there is no bending at the plug sections, plug heads and device output point.



- 14) Use only the add-ons/ accessories specified by the manufacturer.

- 15) Use only together with the carts, bases, tripods, brackets or stands specified by the manufacturer or sold along with the product. When using a cart, pay attention that it won't overturn while carrying the cart/device combination and cause injuries. The device must be fixed to the floor or wall as indicated in the installation instructions in order to avoid any possible damages. Place your device on a level surface.



- 16) Unplug the power cable during thunderstorms or when you will not use your device for a long period of time.



 
- 17) Consult authorised service personnel for service requirements. Never attempt to repair the device yourself.



Opening the cabinet can expose you to dangerous voltages or other hazardous situations. Service is required in situations such as damage to the power cable of the device or its plug, water spills or substances falling into the device, the device is subjected to rain or moisture, it does not operate normally or it is dropped.


- 18) Wipe the TV cabinet clean with a soft and dry cloth. Wipe dust from the screen gently with a soft cloth.

Stubborn stains can be cleaned with a cloth slightly moistened with soap and lukewarm water. Never use solvents such as thinner or gasoline for cleaning. Unplug the AC power cable from the socket when cleaning the TV. Otherwise, there is the risk of electric shock.

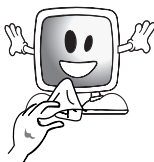

- 19) Do not dispose of the batteries in fire.

 - Do not short circuit, dismantle or overheat the batteries. **There is the risk of explosion if the batteries are not replaced correctly. Replace only with the same or equivalent type batteries.**

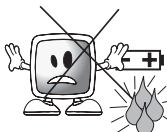

- 20) Disposing of the exhausted batteries:

Dispose of the exhausted batteries in accordance with the local laws and regulations in order to protect our environment.



- 21) Do not dispose of your TV with regular household waste. Observe local laws and regulations for disposal.



Note 1: This is a Class A product. During operation, the device can cause radio interference. In this case the user may have to remedy this. Please contact your specialist dealer.

Note 2: Electromagnetic fields can cause temporary performance degradation. This can be distinguished as noise in the image.

WARNING!!

To prevent the spread of fire, keep candles or other open flames away from this product at all times.



4 Start

Remove your television carefully from its box. You can keep the packaging of your television to use in future.

 
Contents of the box

Power cable (*)
Adaptor (*)
Remote control
2 batteries

Note: The Scart, VGA (*) and RCA cables are not supplied with the device.

(*) These features are optional and may not be available on all models.

4.1-Antenna connection

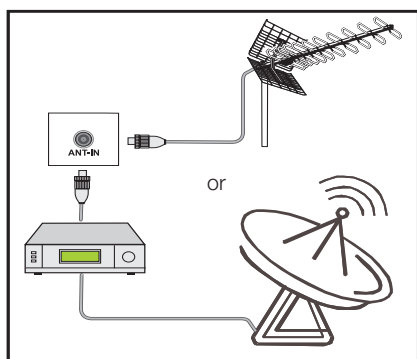

If you use a 75 Ohm coaxial cable (round cable) as an antenna cable, connect the antenna plug directly to the antenna input located on the TV. Motorized vehicles, energy lines and telecommunication lines affect your antenna. Therefore, be careful to install your antenna away from these and metal surface in such a way that it shall not swing. Do not make your antenna cable longer than required and do not coil it. Make sure that it is not crimped passing through a window or door. Your antenna and cable might be affected by natural phenomena such as rain, wind, smoke and humidity over time. Periodically check your antenna and equipment.

4.2-Powering on your device and the initial use

1. Insert the power cable or the adaptor into the appropriate power supply input located on the back panel of the LCD TV.

2. Insert the plug of the power cable or adaptor, supplied with the device into the mains socket.

Note 1: Your TV will switch to the **stand-by** mode in five minutes if there is no broadcast signal from antenna.



3. Press the power on/off button located on the LCD TV.

4. To power on your television, press any numerical key or **POWER**, **PR+** or **PR-** keys on the remote control. For this process, you can also use the buttons on your TV. The picture will appear on the screen after a short while.

Note: If you are not going to use your television for a long time, unplug its power cable from the socket.

Initial power on and performing settings

 
To set up your television, read the sections on the TV controls and making the channel settings.

4.3-Batteries

Open the lid of the battery compartment and make sure that you have placed the batteries in the correct direction. For this remote control, UM-4, IEC R03 or AAA 1.5 V batteries are suitable. Do not throw your old batteries into the fire, discard them in a dedicated waste area for this purpose.

Do not mix used batteries with new ones or different types of batteries together.

The performance of the remote control will be reduced at a distance of 8 meters from or at an angle of 30 degrees beyond the centre of the TV.

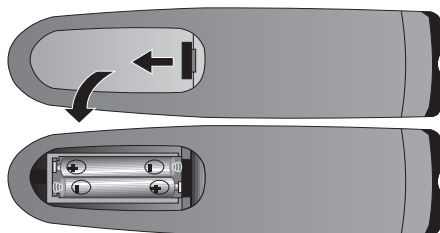

5 Your new television

5.1-TV Control Panel

 
5.1.1- 26" – 32" – 37" – 42" TV Control Panel




Menu button/Source selection button



Power/Standby button



 5.1.2- 32" – 37" – 42" TV Control Panel

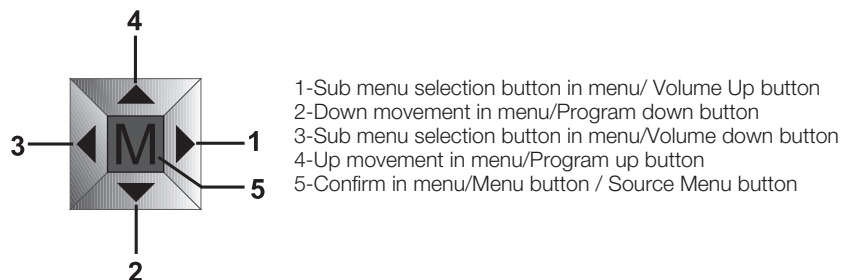


Stand by indicator

Bright light: TV is in Stand-by

Dimmed light: TV is On

No light: Power Cable is not connected.

 5.2-External Connections

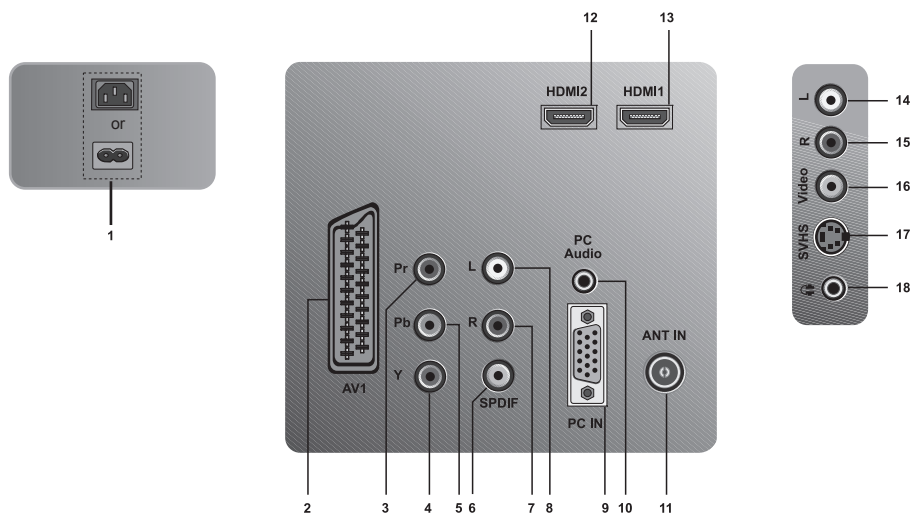

- | | |
|----------------------------------|--|
| 1- Power input | 10- PC audio input |
| 2- AV scart input | 11-Antenna input |
| 3- Component video input (Pr) | 12-HDMI 2 input |
| 4- Component video input (Y) | 13-HDMI 1 input |
| 5- Component video input (Pb) | 14-Sound input CINCH connector (Left/L) |
| 6-SPDIF OUT Digital audio output | 15-Sound input CINCH connector (Right/R) |
| 7- Component audio input (R) | 16-Video input CINCH connector |
| 8- Component audio input (L) | 17-S-VHS input |
| 9- VGA (PC connection input) | 18-Headphone input |

(*): These features are optional and they are not available on all models.

Note 1: RGB input via Scart offers the best picture quality.

Note 2: Above drawing for external connections is representational. Their order and places on your TV may be different.

Please see Technical Specifications Table on page 27 for the available external connections on your television.

5.3-Remote Control



	Stand-by mode On/Off button
	Temporary sound mute (Mute) button
	Source menu button, Teletext page enlarge button (Double)
	Picture Format selection button, PAT (Picture and Teletext) Mode
	Numeric buttons
	Page Stop button in Txt mode (Hold)
	MENU button, Question/Answer button in Txt mode (Reveal)
	Information button Index page button in Txt mode
	Exit menu button
	Return to previous menu button
	Up movement button (Menu) Down movement button (Menu) Right / Left movement buttons (Menu)
	Menu selection confirm
	Volume down button, Volume up button
	Program forward selection button, Program backward selection button
	Red teletext button, Picture Mode selection button
	Green teletext button, Sound Mode selection button
	Yellow teletext button, Freeze Picture button
	Blue teletext button, ZOOM mode selection button
	Teletext/Mix selection button
	Page update button in Txt mode (Update)
	Last viewed program selection button (SWAP)
	Sub page button in Txt mode (Sub Page), Time display button

6.1-TV controls

6.1.1-Temporary on/off (STAND-BY)



When you press the red **POWER** button located on the upper left hand side of your remote control while your television is switched on, the sound and the picture will go off. In the stand-by mode, the power indicator of your television will glow brighter. To switch your television back on, either press any numeric button or **PR+/PR-** buttons.

6.1.2-Channel Selection



You may select whichever program number you would like by pressing the **PR+/PR-** buttons located on your television and your remote control. To select the programs that are above 9, you can use the Numerical buttons. You may enter the number of the program you would like to select using the numerical buttons. For example, to switch to the program number 12, press respectively the numeric buttons 1 and

2 on your remote control. You can perform the program selection also from the Program Table.

6.1.3-TV and AV Mode Selection



Press the **AV** button on your remote control. **SOURCE** menu will be displayed. Select **TV** or desired **AV** mode from the Source menu with **Up/Down** movement buttons and confirm with **OK** button so that your television will switch to the source you have selected.

6.1.4-Temporary sound mute (MUTE)



To temporarily mute the sound of your television, press the **MUTE** button on your remote control. In that case, **MUTE** symbol will appear on the screen. When you press the same button a second time, the sound will be restored. If you press the **VOL+** button while in the Mute mode, the sound level is increased and the Mute function is aborted.

6.1.5-Returning to Selected Program (SWAP)



 
Allows you to switch between the current program you watch and the last selected program. For example, if you change the channel to Program 11 while you were watching Program 1, press **SWAP** button to switch back to Program 1. Press **SWAP** button to switch back to Program 11 again.

PR01 → PR11 → PR01 → PR11

HDMI1 → SCART1 → HDMI1 → SCART1


6.1.6-Main Menu

Press the **M** button. The Menu including all the setting menus will appear on the screen. Navigate through the Menu titles with the **Up / Down** movement buttons and press the **OK** button to select the desired menu. If you want to exit the menu in any step, just press the **EXIT** button. Press **←** or **M** buttons to return to the previous Menu while you are in a sub menu.

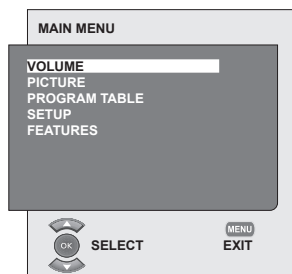


6.2-Turning on the TV and Setting the Channels

 LANGUAGE menu will be displayed on the screen when you turn on your television for the first time.

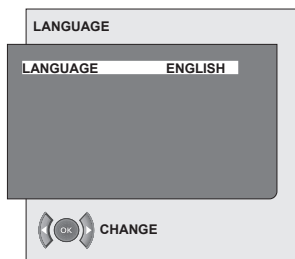

 Select the language you would like to use on your television and press **OK** button to continue. **COUNTRY SELECTION** menu will be displayed.

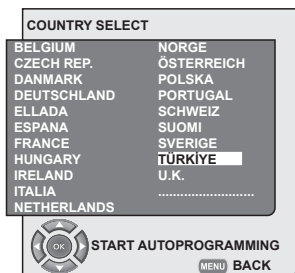

If the antenna connections are made properly, select the country with **Up/Down, Left/Right** movement buttons and press **OK** button to start autoprogramming. At the same moment, the marker indicating the progress of the autoprogramming will be displayed. The Program Table, which will allow you to sort the channels as you wish, will be displayed after the search is complete.

 
6.2.1-Automatic tuning of channels and storing in the memory

You can either tune the programs Automatically or Manually and store them in your television.


Note: If your television does not receive any antenna broadcast for a period of 5 minutes, it automatically switches to the stand-by position. The countdown OSD is displayed on the screen during the last 1 minute.



You can tune the programs automatically with the Autoprogram function of your television and then sort the channels as you desire by means of the **Program Table**. Press the **M** button on your remote control. Select **SETUP** by pressing the **down** movement button and confirm your selection with **OK** button. Setup menu is displayed.

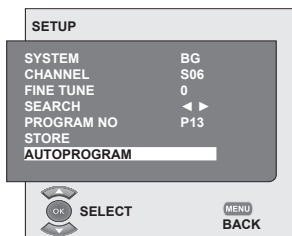

 Select **PROGRAM NO** tab by pressing the **Up/Down** movement buttons in Setup menu, enter the channel number to be searched and stored automatically, then select **AUTOPROGRAM** tab by using the **Up/Down** movement buttons and press **OK** button; Country Selection menu will be displayed.

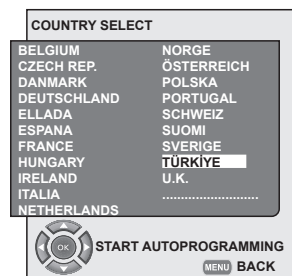

In the Country Selection menu, select the country, whose broadcast you would like to watch in priority, by pressing the **Up/Down** and **Right/Left** movement buttons and start autoprogramming by pressing the **OK** button. The channels will be automatically searched and those found will be stored in memory starting from the program selected in the Setup menu. At the same moment, the marker indicating the progress of the autoprogramming will be displayed.

 


To stop the process at any given time, please press the **M** button. The Program Table, which will allow you to sort the channels as you wish, will be displayed after the automatic search is complete.

6.2.2-Manual tuning of channels and storing in the memory

6.2.2.1-If you already know the channel number

Press the **M** button. Move to the **SETUP** menu by pressing the Down movement button in Main Menu and confirm your selection with **OK** button. The Setup menu is displayed.

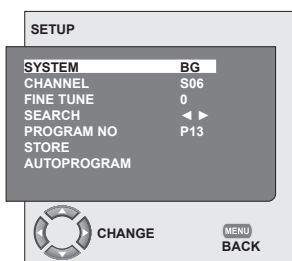

Select the system in which you would like to make the search from the **SYSTEM** tab. Move into **CHANNEL** tab by pressing the down movement button. Press **OK** on your remote control to select "**S**" for cable channels and "**C**" for channels received via the antenna. Move onto the **PROGRAM NO** tab and using the number buttons enter the channel number in which you would like to have the channel stored. If the broadcast viewed on the screen is of your desired quality, first move onto the

STORE tab with the down movement button to store in the memory the selection you have made and store the channel by pressing the **Left** or **Right** movement buttons. The prompt **STORED** will be displayed briefly. The channel will be stored according to the program number of your choice. You can tune and store in memory other channels the same way. In the event that you wish to exit the channel settings menu for any reason, simply press the **EXIT** button.

6.2.2.2-If you do not know the channel number



Press the **M** button. Move to the **SETUP** menu by pressing the **down** movement button in Main Menu and confirm your selection with **OK** button. The Setup menu is displayed. Select the system in which you would like to make the search from the **SYSTEM** tab. Move into **CHANNEL** tab by pressing the down movement button. Press **OK** on your remote control to select "**S**" for cable channels and "**C**" for channels received via the antenna. Select **SEARCH** tab using the **up/down** movement buttons, and scan the channels in ascending order with **Right** movement button and in descending order with **Left** movement button. If the channel that is found is of your liking, select the **STORE** tab. Then store it in the memory by pressing the **Right** or **Left** movement buttons. Repeat the same procedure for other channels by selecting the program number of your choice from the **PROGRAM NO** tab. If the channel you found is not of the desired quality and requires Fine Tuning or if you would like to rename the channel, refer to the relevant sections.

 
6.2.3-Fine Tuning



If the channel you found is not of the desired quality and requires **Fine Tuning**, then select the **FINE TUNE** tab by pressing the **Down** movement button in the **SETUP** menu. Using the **Left/Right** movement buttons on your remote control, adjust the broadcast displayed on the screen to your desired quality. Under normal circumstances, you will not require to use the Fine Tune function. The AFC values of your television will automatically adjust and lock themselves to the channel. However, you might need it in case the television transmitters do not operate according to the standards. To store in the memory, the settings you have made, select the **STORE** tab and press the **Right** or **Left** movement button.

6.3-Program Table

Press the **M** button. Move to the **PROGRAM TABLE** tab by pressing the **Down** movement button in Main Menu and confirm your selection with the **OK** button. Program Table menu will be displayed.

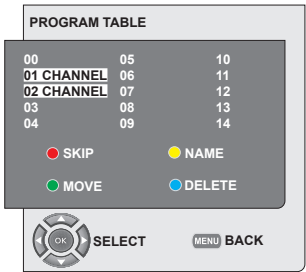

6.3.1-Switching the locations of the stored channels



Select the program you would like to relocate by pressing the **Up/Down** or **Left/Right** movement buttons. Press the **“GREEN”** button. Green will blink. Move to the other program you would like to relocate by pressing the **up/down** or **right/left** movement buttons. Finish the relocation process by pressing the **“GREEN”** colored button. The channel in the first program number you selected has been moved to your second selected program number and the channels between both program numbers have been shifted to the initially selected program number. After setting is complete, press the **EXIT** button to exit the menu.

6.3.2-Deleting a stored channel



Select the program you would like to delete by pressing the **up/down** or **right/left** movement buttons. Press the **“BLUE”** button. The blue button on the menu will blink for approval. You may perform the deletion process by pressing the **“BLUE”** button or you may abort the deletion process by pressing the **M** button. Once you pres the **“BLUE”** button, the selected program is deleted and the following channels are transferred to after this program number. After setting is complete, press the **EXIT** button to exit the menu.

6.3.3-Skipping a stored channel



In the event that you do not wish to see certain programs while navigating through the channels using the **PR+ / PR-** buttons, then you can use this function. Select the program that will be hidden by pressing the **up/down** or **right/left** movement buttons. Press the **“RED”** button. The name of the program to be skipped shall appear in red. You may perform this procedure for more than one program. To view the skipped program, directly enter the program number using the numeric buttons. To cancel the program skipping process, press again the **“RED”** button. After setting is complete, press the **EXIT** button to exit the menu.

6.3.4-To name the channels



 
You can assign your program or programs of choice the names that have a maximum of five characters. Select the program you would like to name from the Program Table by pressing the **up/down** or **right/left** movement buttons. Press the **“YELLOW”** button. An empty space appears beside the channel for which you would like to specify name information. Here, choose the desired letter, number or sign using the **up/down** movement buttons. For the second character, press the **right** movement button and then select the desired letter, number or sign again with the **up/down** movement buttons. After entering all the characters, store the name you have written in the memory by pressing the **“YELLOW”** button. To write names for any of the other programs, simply repeat the above procedure. If you want to exit the menu, simply press the **EXIT** button. If the program is not named, then the channel number of that program will be displayed automatically.

7 Settings of Your New Television

7.1- Sound Menu Settings



You may perform volume settings by using the **VOL+** or **VOL-** buttons on your television or the **VOL+/VOL-** buttons on your remote control. You can perform other Sound settings by entering the Sound menu. For this, press the **M** button on your remote control. Select **SOUND** by pressing the **Up/Down** movement buttons from the main menu and press the **OK** button. The Sound menu is displayed.

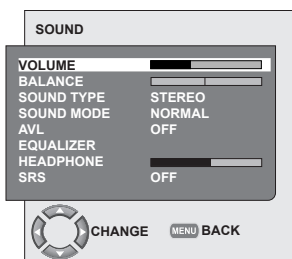

You can select the tab which you want to process with the **Down** movement button and set its level with **Left/Right** movement buttons.

7.1.1-Balance

To adjust the sound balance between the right and left loudspeakers to the desired level, select the **BALANCE** tab in the sound menu by using the **Down** movement button. Using the **Left/Right** movement buttons adjust this option to the desired level.

7.1.2-Sound Type

The program you watch may be broadcast in stereo or in two different languages. Using the **Right/Left** movement buttons in this menu, you can select Mono/Stereo or Dual-I/Dual-II languages.

7.1.3-Sound Mode

Sound mode can be set as **NORMAL**, **SPATIAL** or **SRS** by means of direction buttons. Spatial option gives depth to the sound of the program. Options in the **SRS** menu become active when the SRS function is selected.

Note: **SRS** menu will not be active if the **SRS** is not selected from the Sound mode tab.

7.1.4-AVL (Automatic Volume Limiting)

Television transmitters have different sound levels. This can be noticed as high and low volume levels in different channels while switching from one program to another. Using the **Left/Right** movement buttons, select **ON**. The AVL (Automatic Volume Limiting) function maintains the same sound level as you switch from program to program. Select **OFF** to cancel it.

7.1.5-Headphones

 
By connecting headphones to your television you can listen to the program sounds independently from your television. To turn up and down the headphone volume level, select **HEADPHONE** tab from the Sound menu and adjust the volume level by using the **Left/Right** movement buttons. When you want to hear the sound from the headphone only, just press the **MUTE** button on your remote control.

7.1.6-SRS TruSurround Sound

This is the virtual sound technology. With TruSurround, 6 different channels of the digital sound are processed in two channels and conveyed to the audience through two speakers. TruSurround system is used to create a virtual surround sound effect in environments where there is no 4.1 or 5.1 speaker systems exist.

SRS  **TruSurround is a registered TruSurround XT trademark of the SRS Labs. Inc.**

TruSurround XT technology is covered under the license of SRS Labs. Inc.

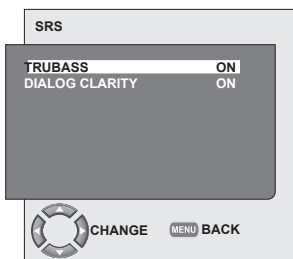

7.1.6.1-TruBass

TruBass system is a signal processing technology that reinforces the bass sounds.

 
7.1.6.2-Dialog Clarity

This feature enhances the understandability of the speeches in dialogues.

Note: When the **SRS** is set to **On**, **AVL** and **EQUALIZER** functions will automatically be set to **Off**.

7.1.7-Equalizer

Select the **EQUALIZER** tab in the Sound menu and confirm with the **OK** button. The Equalizer menu is displayed.

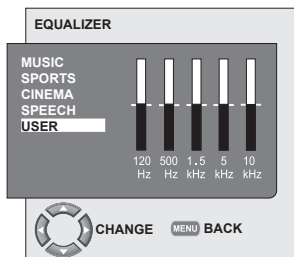

Using the **Left/Right**, **Up/Down** movement buttons, you may select either one of the preset **MUSIC**, **SPORTS**, **CINEMA** and **SPEECH** options which enhance the sound effect depending on the feature of the program you are watching or the **USER** option which you can adjust as you desire. To adjust the User option, select **USER** and press the **right** movement button. You can adjust the frequency levels with the **Up/Down** movement buttons. You can select one of the **120Hz**, **500Hz**, **1.5KHz**, **5KHz** and **10KHz** frequency bands with **Right** and **Left** movement buttons. Press the **←** or **M** button to store the settings and exit the user option. You may exit the equalizer menu by pressing the **EXIT** button again.



 
Note: You can select the equalizer options directly by pressing the **GREEN** button on your remote control.

7.2-Picture Menu Settings

7.2.1-Picture Menu



You can perform other picture settings by entering the Picture menu. For this, press the **M** button on your remote control. Select **PICTURE** by pressing the **Up/Down** movement buttons from the main menu and press the **OK** button. The Picture menu will be displayed.

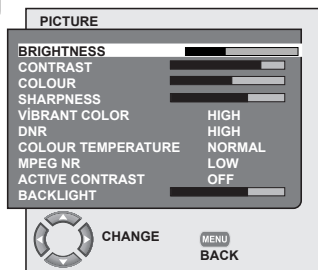

You can select the desired setting by pressing the **Up/Down** movement buttons and adjust their levels with **Right/Left** movement buttons. You can adjust **BRIGHTNESS**, **CONTRAST**, **COLOR** and **SHARPNESS** levels as you desire.

The changes you have made in the picture settings will be stored in the memory without requiring any other operations.

7.2.2- Vibrant Color

With this feature you can automatically adjust color saturation according to the scene. To do this, select **Vibrant Color** tab with the **Up/Down** movement buttons and select one of the **Off**, **Low**, **Mid** or **High** options with **Right/Left** movement buttons. With the 'High' option you can obtain the most saturated colors.

7.2.3-DNR (Noise reduction)

You may reduce interference and noise formed in the picture by using this feature. Select **DNR** tab in the Picture menu with the **Up/Down** movement buttons to activate this feature and select one of the **OFF**, **LOW**, **MID**, **HIGH** or **AUTO** options with **Left/Right** movement buttons.

7.2.4-Color Temperature

You can adjust the color temperature with this feature. Move to the **Color Temperature** tab in the Picture menu by pressing the **up/down** movement buttons and select **WARM**, **COOL** or **NORMAL** by pressing the **right/left** movement buttons. You can also adjust the **RED**, **GREEN** and **BLUE** levels from the Picture menu in **PC** mode and thus, you can set the Color Temperature to the **USER** option.

7.2.5-Tint

When NTSC video is input via Scart, you may make Hue settings. The tint option is not seen in the menu when you have not input this type of a video. When a NTSC video is connected via the Scart, this option becomes active and it is available in the menu.

7.2.6-Active Contrast (Optional)

This feature allows making brightness settings according to the picture. A brighter or dimmer picture can be sent to the screen according to the brightness level of the picture. Thus, a wider effect is obtained in terms of contrast.

7.2.7-Backlight

With this feature, you can adjust the intensity of light reflected to the LCD Panel. Select **Backlight** by pressing the **Up/Down** movement buttons and adjust the desired level by pressing the **right/left** movement buttons.

Note: If your TV is equipped with Active Contrast feature and this feature is set to **On**, then **Backlight** tab is not displayed in the menu.

7.2.8-MPEG NR

You may remove the artifacts that appear in the picture as square shaped blocks by using this feature except in the Tuner mode. Select **Mpeg NR** tab in the Picture menu with the **up/down** movement buttons to activate this feature and select one of the **OFF**, **LOW**, **MID** and **HIGH** options with **right/left** movement buttons.

Note: MPEG NR feature appears in the menu for all sources except the Tuner mode.

7.2.9-Picture Smart



You can select either one of the three non-adjustable settings in the memory or one of the user options by pressing the **RED** button on your remote control. **SOFT**, **NATURAL**, **RICH** are default

values; **USER** represents the values you stored in memory.

7.2.10-Picture Format



With this option, you can view the broadcast you watch in a format of your choice. You may view broadcastings in either **AUTO**, **16:9**, **14:9**, **4:3**, **LETTERBOX**, **SUBTITLE** formats. **16:9**, **14:9** or **4:3** formats can be selected in **PC** and **HDMI** modes. In that case, the name of the selected picture format will be displayed in the centre of the screen.

7.2.10.1-Auto

Some movie channels may broadcast in the 16:9 format. If you would like to see this format automatically, then select **AUTO**. In that case, **AUTO 16:9** appears on your screen.



7.2.10.2-16:9

Please use this setting for watching wide screen DVDs, wide screen video cassette or 16:9 formatted broadcasts. Since various screen formats such as 16:9, 14:9 and etc. are used, black stripes might be formed on the lower and upper parts of the screen.



7.2.10.3-14:9

This is a movie format.



7.2.10.4-4:3

Use this setting to watch the broadcasts in the 4:3 format.



7.2.10.5-Letterbox

While watching a “16:9 or Cinemascope formatted” film or video cassette, this setting will eliminate or minimize the black stripes on the background by zooming in the picture without diffusing it.



7.2.10.6-Subtitle

If the subtitles are transmitted in the “16:9 formatted” broadcast, then this setting will push the picture upwards in order to ensure the entire written text to be seen.



 
Note: Since the use of certain functions in order to change the picture sizes for collective projection or commercial purposes (modifying the height and width etc.) will be deemed an infringement of the picture’s copyright, legal proceedings can be carried out as required under relevant laws.

7.3-Features Menu Settings

M

OK

Press the **M** button on your remote control. Select **FEATURES** by pressing the **Up/Down** movement buttons from the main menu and press the **OK** button. The Features menu will be displayed. You can select the titles for which you would like to perform an operation in this menu by using the **up/down** movement buttons.

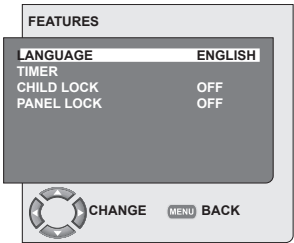


7.3.1-Language

Select the Language tab and press **right/left** movement buttons to select the language of the desired country. All the setting displays of your television will be shown in the language that you selected.

7.3.2-Timer

 Your television is equipped with the feature of being able to be turned off and on at periods that you specify. Select **TIMER** by pressing the up/down movement buttons and press the **OK** button in order to have your TV turned off at the end of a desired period. The Timer menu will be displayed.

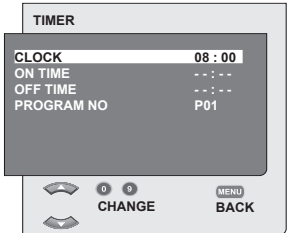

Time data is obtained from Teletext; if no time data is available then select **TIME** with the **up/down** movement buttons and enter the current time with numeric buttons. Select the **ON TIME** and **OFF TIME** in the same manner and specify the time. Enter the program number you desire with the numeric buttons or the external source with the **AV** button into **PROGRAM NO** tab to specify the channel or source from which you would like the TV to be turned-on to. At the end of the time you specified, your television will automatically switch to stand-by. If the on time for TV is specified in the Menu, the TV will switch to the selected program at that time; if the TV is in standby mode, then it will be turned on with the selected channel.

7.3.3-Child Lock

If this feature is turned On, the program currently being watched becomes locked, the image and sound goes off and the locked symbol appears on the upper left corner of the screen. The locked channel is skipped when you channel search with **PR+**, **PR-** buttons.

7.3.4-Panel Lock

If this feature is turned On, the control buttons on your LCD television will be locked and will not function. They will be active again when the feature is turned Off.

7.4-Other Picture Features

7.4.1-Zoom



Press the **ZOOM** button on your remote control while watching a channel to activate this feature. During the zooming process, the image is zoomed in in three stages oriented to the centre. To move the picture in this mode, you can use **Up/Down** or **Right/Left** movement buttons on your remote control.

Note: Zoom mode does not function with **COMP/HDMI/PC** inputs. Zoom mode is aborted when the channel is changed or Teletext is activated.

7.4.2-Freeze (Freeze picture)



You may freeze the program picture you are watching with this feature. For this, press the **FREEZE** button on your remote control. The program picture will freeze until the same button is pressed a second time.

7.4.3-PAT Mode



With this feature, you can follow the teletext broadcasts simultaneously with the current program, provided that the current program contains teletext broadcast. For this purpose, when you press **TXT** and then **16:9** buttons in a channel with teletext broadcasting, the screen will be split into two with the left pane showing the currently watched program and the right pane will show the Teletext at the same time. In the event that you wish to exit the **PAT** mode for any reason, simply press the **16:9** button or **TXT** button.

 


8 Teletext

Being one of the most prominent services of broadcasting today, Teletext renders the TV more fruitful. Teletext means in short the transmission of various updated information along with the TV broadcast signal in the form of text and graphics. To be able to receive a quality teletext broadcast, a good antenna system and a broadcast signal that is not weak, with no reflections and interference from other channels are required. Even in a very clear reception, it is normal for some characters or tabs to be lost. Such conditions will automatically be improved in a short time under normal circumstances.

8.1-Entering the Teletext Mode

In a channel that does not have the Teletext feature, **NO TEXT** will be displayed when you press the **TXT** button. In order to switch your television to the teletext broadcast, please press the **TXT** button in a program that has a teletext broadcast. To switch back to the television broadcast, press the same button twice. Once you have switched to the teletext broadcast, the initial page that appears will be the index page.

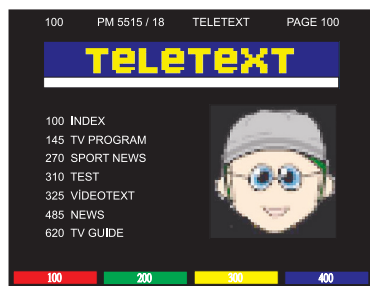

In this page, the titles of the topics in the teletext broadcast and the initial page numbers will appear.

8.2-Page Selection



To be able to view the page you would like on the screen, type in the number of that page using the numerical keys. You can see the number you have entered on the left side of the upper title tab. When you would like to turn the pages one by one, you can go to the next page pressing the **up** button and to the previous page pressing the **down** button. Press the **I** button to return to the Index page.

8.3-Teletext image in the TV picture (MIX)



With this feature, you can watch the teletext information and the TV broadcast together. Thus, you can follow the teletext broadcast of the channel while you watch the TV broadcast. To do this, press **TXT** button in a channel with Teletext broadcast.



8.4-Page enlarge button (DOUBLE)



Using this button, you can watch the top half of the teletext page in an enlarged format. To be able to view the bottom half of the enlarged page, press the same button for the second time. Once you press the same button the third time, the page will be restored to its normal size.

8.5-Page Stop (HOLD)



Some information is laid out by the broadcasting agency in multiple pages and it is broadcast in an automatic cycle mode. For example, on a text of four pages, the pages are indicated with the figures 01, 02, 03 and 04 on the bottom of the page. To view one of these pages for a longer time, press the **HOLD** button. When you press the same button again, the cycle continues.

8.6-Subpage selection (SUB)



If the page of text you are viewing contains sub pages the page numbers starting from 01 appear on the screen. You can switch to the sub pages with the **SUB** button. In which case, the sub page tab is displayed on the bottom line within “**Red -**” and “**Green +**” frames. You can select the subpages by pressing the “**RED**” and “**GREEN**” buttons. You can exit the subpage by pressing the **SUB** button again.

8.7-Temporary TV Picture (UPDATE)



This button allows you to switch to the television picture while the page you want is being searched in the teletext broadcast eliminating the need to wait during the search. You may switch to the television picture by pressing the **UPDATE** button while Teletext is searching for your desired page. Once the page you want is found, the number of that page appears on the screen.

8.8-Question - Answer Button (REVEAL)



Sometimes, a teletext page contains a hidden answer such as a game or a riddle. Press the **M** button to disclose the hidden answer.

8.9-Fastext

The colored buttons on the remote control are for the fastext feature. When you select any page, the titles on various subjects may appear on the screen in four different colors or inside colored frames (red, green, yellow and blue). By pressing the button pertaining to the relevant color on the remote control, you can access the subject of your choice without waiting.

Note: The fastext feature is not available for all teletext broadcasts. It is determined by the broadcasting agency whether it is to be broadcast or not.

8.10-Toptext (optional)

There is a topics line in yellow and blue at the bottom of the teletext screen. You can select the relevant topic by pressing the yellow or blue buttons on the remote control. You can select the next page by pressing the red button and the previous page by pressing the green button.

Note: Toptext feature is not available in every program.

 
9 External equipment connection

Your TV is equipped with **8** inputs including antenna input, which allows for the external device connection. These inputs are:

- 1-Antenna input
- 2-SCART input
- 3-AV input
- 4-S-Video input
- 5-PC input
- 6-HDMI 1 input
- 7-HDMI 2 input
- 8-YPbPr Component input


You can connect your external device supporting the suitable inputs to your TV via these inputs. By pressing the **AV** button on your remote control, select the external source input to which you connected your device.

9.1-Connecting an external equipment via Scart connection

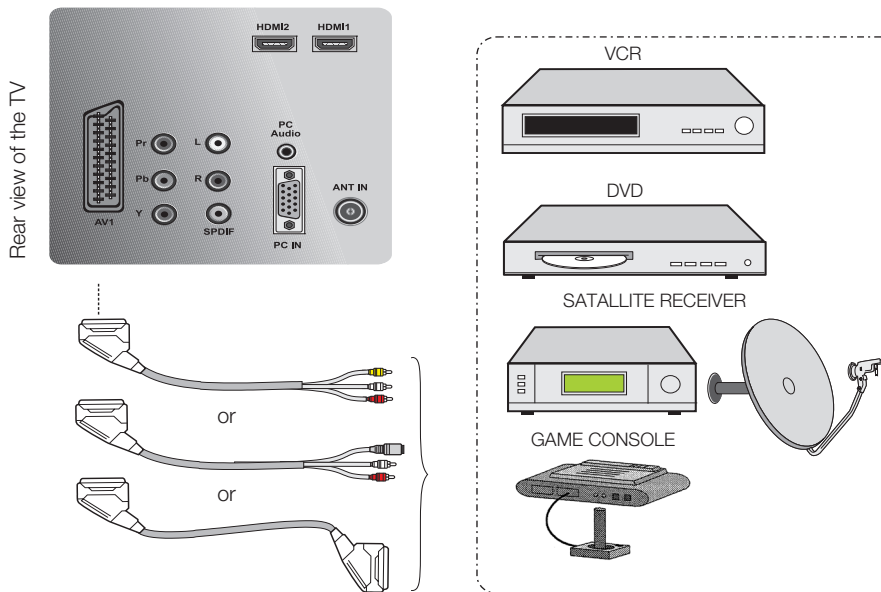


SCART : To watch the picture of the broadcast device connected to Scart, select **AV1** from the **Source** menu and press **OK** button. (You can watch via this Scart if the connected device has RGB or CVBS output. Picture information is recognized automatically and specifies as RGB or CVBS.)

 9.2-Connecting an external equipment via AV connection

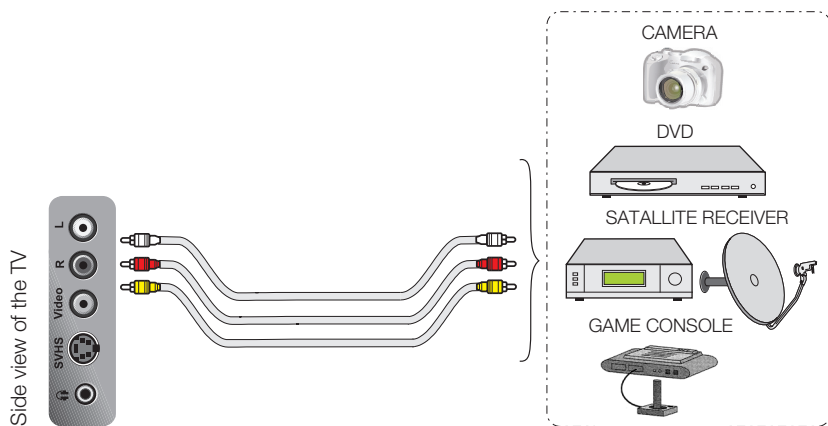


AV : To watch the picture of the broadcast device connected using the RCA (Cinch) input, select **AV2** option from the **Source** menu and press **OK** button. Your TV will switch to the selected source.

 9.3-Connecting an external device via S-Video connection

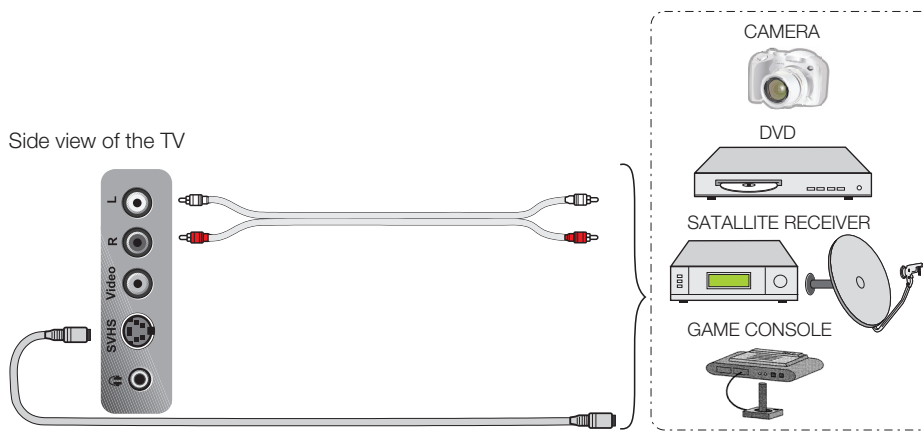

S-Video: To watch the picture of the broadcast device connected using the SVHS input, select **S-VHS** option from the **Source** menu and press **OK** button. Your TV will switch to the selected source.

 
9.4-Connecting an external device via YPBPR connection

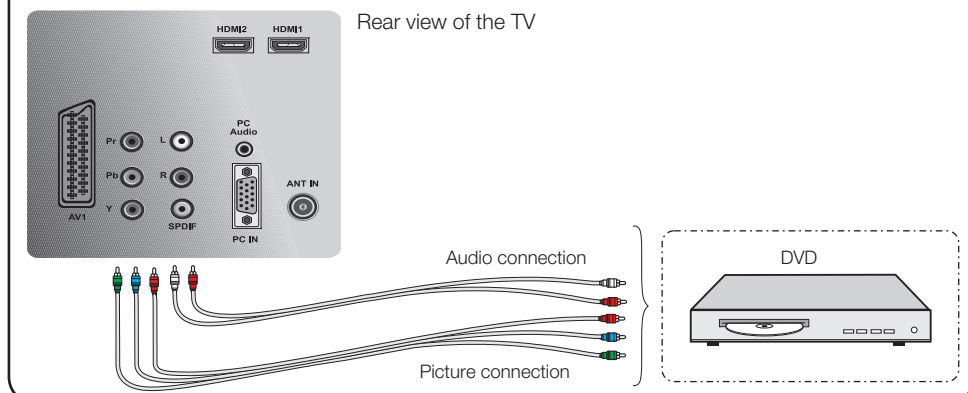

YPBPR (Component Input): When a connection is made via YPBPR socket, select **YPBPR** option from the **Source** menu and press the **OK** button to display the picture. Your TV will switch to the selected source.

Note: Only **16:9, 4:3, 14:9, Letterbox** and **Subtitle** (some definitions) are supported as picture format in YPBPR mode.

 9.5-Connecting an external device via HDMI connection

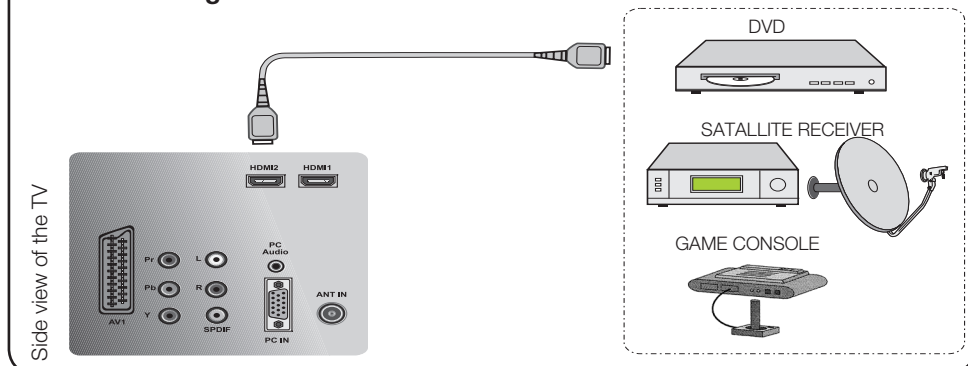

HDMI: When a connection is made via HDMI socket, select the **HDMI** input you connected through from the **Source** menu and press the **OK** button to be able to display these pictures. Your TV will switch to the selected source.

Connect to the HDMI input at the back of your TV by using the connector located on your PC or your digital video-transmission device with a suitable cable (not supplied with the TV).

Note: To be able to watch an image in the HDMI mode, your computer must be equipped with a HDMI graphic card.

You may display the resolution information by pressing the **I** button.

9.5.1-HDCP

Your TV supports HDCP feature. To use this feature, you must set up a connection to your TV set's HDMI video port and select **HDMI** by pressing the **AV** key on your remote control.

 
NOTE:In HDMI mode; some resolutions are supported when a DVI to HDMI converter cable from a PC is used. Only **16:9, 4:3, 14:9** (some definitions) are supported as picture format.

High Definition – Full HD



Full HD
1080

Your television can receive high-definition signals (HDTV). You can connect the input sources (HDTV set-top box or HDTV DVD player) to the (HDMI) socket (digital HDTV signal). This ensures that you can view digital HDTV programs, even if they are copy-protected (HDCP High-Definition Copy Protection).

9.6-PC connection

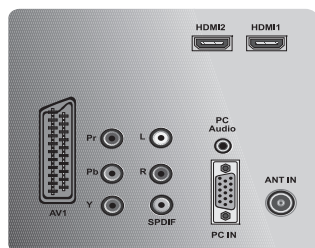

Rear view of the TV

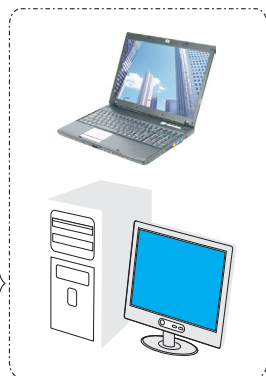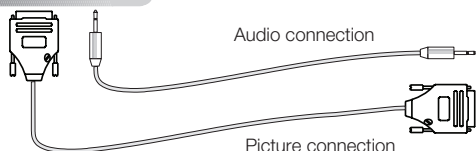  

9.6.1-PC Connection:

Connect the D-Sub15 connector to the PC-IN socket at the back of your television by using an appropriate cable (not supplied with your television). Again, by using an appropriate cable, connect the audio output of your PC to the **PC AUDIO-IN** at the back of your television to listen to sounds from your PC and you can adjust the volume level of your source by using **VOL+/VOL-** buttons.

9.6.2-Transition to the PC mode

For your LCD-TV to switch to the monitor (PC) mode, press the **AV** button on your remote control. The **SOURCE** menu appears on the screen. Select **PC** by pressing the **up/down** movement buttons and press the **OK** button.

9.6.3-PC Access Setting

Enter into the **SETUP** menu from the Main Menu by pressing the **M** button in the PC mode. In order to make the necessary settings in this menu, you can select the headings with the **up-down** buttons on your remote control to perform the following monitor-related settings.

9.6.4-AUTOCONFIGURATION

The most suitable geometric settings in accordance with the entry mode are configured by this function. For this operation, select the **AUTOCONFIGURATION** tab and press **OK** button.

9.6.5-HORIZONTAL POSITION: Horizontal position setting

9.6.6-VERTICAL POSITION: Vertical position setting

9.6.7-CLOCK FREQUENCY: This is the pixel clock frequency. User can narrow down or enlarge the display by selecting a desired value.


9.6.8-PHASE: Using the right/left movement buttons, you can ensure that the colors and shapes are exactly consolidated on the PC image.

9.6.9-PICTURE FORMAT

You can select the PC image as to be displayed in **16:9**, **4:3** or **14:9** formats.

Note: In the Monitor mode, you can make the **Brightness**, **Contrast** and **Sharpness** settings from the **PICTURE** menu.

 9.7-Headphone Connection

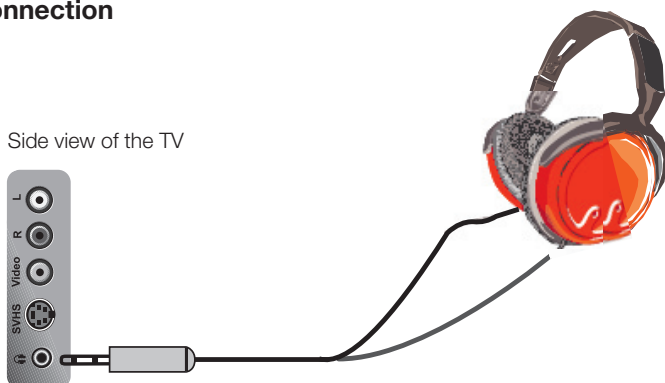

The headphones must have impedance between 8 and 32 ohms and have a 3.5 mm stereo jack plug. Plug the headphone jack into the headphone socket of the TV.

10 Help and tips

Failure	Possible cause	Solution
The television does not function	Is the power cord connected to the mains supply?	Check the power cord.
	Is the main power On/Off button on?	Check if the On/Off button is on.
Poor picture quality	Is the antenna cable attached?	Check the antenna cable.
	If you are using a satellite antenna, is it well adjusted?	Have the antenna adjusted.
	Antenna may be affected by two connected external devices.	Try disconnecting one of the devices.
	It may need fine tuning.	Perform fine tuning.
	Picture settings are not correct.	Adjust Brightness, Contrast and Color.
Shadow and reflection in the picture.	Channel setting	Perform automatic, manual channel setting or fine tuning.
	Antenna	Check antenna cable and system
No picture	Is there any damage on the antenna cable?	Check the antenna cable.
	Are you sure you pressed the correct button on your remote control?	Press the PR+ or PR- button to turn on the TV.
No color.	Color intensity level is at the lowest setting.	Lighten the color.
	Broadcast system setting (if setting choice is available)	Select the broadcast system.
	Problem in channel broadcasting.	Test with another channel.
No or defective teletext	Television channel (no teletext) or antenna system.	Test another channel for fine tuning and shadowy pictures
	Very weak signal	Check the antenna system.
No sound	Temporary sound mute may be on	Try pressing the mute button
	Is the sound turned down?	Turn on the volume with Vol + button.
Remote control does not work	Are the batteries correctly placed?	Place the batteries correctly.
	Are batteries exhausted?	Replace the batteries with new ones.
	Is there any obstacle between the remote control and television?	If yes, remove it.
Picture is not readable after turning on the TV	Child lock is active.	Disable the child lock.

If your television does not work properly even though you tried the above mentioned solutions, try turning it on and off again. If you cannot start your television even though you have applied all noted methods, refer to the dealer or authorised service from where you purchased the product. Never attempt to repair a faulty device yourself.

11 Technical specifications chart

SCREEN SIZE	32"	37"	42"
Panel type	32", 16:9 Active matrix TFT	37", 16:9 Active matrix TFT	42", 16:9 Active matrix TFT
Sound output	2x10 W	2x10 W	2x10 W
Power consumption	130 W	170 W	200 W
Stand by power value	<1 W	<1 W	<1 W
Scart	Standard	Standard	Standard
Audio/Video RCA(Input)	Standard	Standard	Standard
S-Video socket	Standard	Standard	Standard
YUV (Video/Sound) Component Input	Standard	Standard	Standard
HDMI 1 Input	Standard	Standard	Standard
HDMI 2 Input	Standard	Standard	Standard
VGA Input	Standard	Standard	Standard
PC Audio Input	Standard	Standard	Standard
SPDIF Digital sound output	Standard	Standard	Standard
Headphone socket	Standard	Standard	Standard

General technical specifications

Power supply AC:	220-240V ~ 50-60 Hz
Program memory:	100
RF Aerial input:	75 Ohm (Co-axial)
Sound systems:	Mono/Stereo/Nicam
Batteries:	2xUM - 4, IEC R03 or AAA 1.5V
Channels received:	VHF (Band I Channel 2-4) VHF (Band III Channel 5-12) UHF (Channel 21-69) Cable TV (S1-S20/S21-S41)
Broadcasting systems received:	PAL BG PAL DK

Note: Your television has been manufactured in accordance with the system available in your country and this system cannot be changed by the user except as described below: In countries where BG/DK and BG broadcasts are made (BG or DK). For further information, see the settings section for your television.

Design and specifications may be changed without prior notification.