

**BLUEBEAT**  
**DOCKING SPEAKER**  
**GSD 320**



FOR A GOOD REASON

**GRUNDIG**





# CONTENTS

---

## 5 SET-UP AND SAFETY

### 6 OVERVIEW

- 6 Controls and sockets
- 6 Remote control buttons

### 7 CONNECTION AND PREPARATION

- 7 Connecting the power adapter
- 7 Activate the remote control battery
- 7 Change remote control battery (Type CR 2025)
- 7 Connecting the iPod/iPhone
- 7 Connecting external devices

### 8 iPod/iPhone MODE

- 8 Made for iPod/iPhone
- 8 Supported iPod/iPhone models
- 8 The software is made to support the following iPod/iPhone models:
- 8 Playing the contents of an iPod/iPhone

### 9 BLUETOOTH MODE

### 10 AUX MODE

- 10 Play Audio signal from an external device

### 11 INFORMATION

- 11 Technical data
- 11 Environmental note

# SET-UP AND SAFETY

---

Please note the following instructions when setting up the device:

- This device is designed for the playback of audio signals. Any other use is expressly prohibited.
- Make sure there is adequate ventilation when positioning the device. There must be a free space of at least 10 cm behind the device. Do not place objects on the ventilation slots.
- Do not cover the device with newspapers, table cloths, curtains, etc.
- Please note when deciding where to put the device that furniture surfaces are covered by various types of lacquer and plastic, most of which contain chemical additives. These may cause corrosion to the feet of the device, thus resulting in stains on the surface of the furniture which can be difficult or impossible to remove.
- If the device is exposed to sudden changes in temperature, for example when taken from the cold into a warm room, wait at least two hours before using it.
- The device is designed for use in dry rooms. Protect the device from rain, moisture (dripping or splashing water) and heat (heaters or direct sunlight, etc).
- Only use the device in a moderate climate.
- Do not place any objects containing liquids (for example, vases) on the device.
- Do not place any objects such as burning candles on the device.
- Never open the device casing under any circumstances. No warranty claims are accepted for damage resulting from improper handling.
- Do not use any cleaning agent, as this may damage the casing. Clean the device with a clean, moist leather cloth.
- Thunderstorms are a danger to all electrical devices. Even if the device is switched off, it can be damaged by a lightning strike to the mains. Always remove the mains plug during an electrical storm.
- The remote control contains a button cell. Please always keep the remote control and the button cell out of reach of children.
- If the button cell is accidentally swallowed, it can lead to burns and even death within two hours. You should therefore see a doctor immediately.
- Keep new and used batteries out of reach of children. If the battery compartment cannot be closed safely, do not continue to use the device and keep out of reach of children.
- Remove the battery if used up or if you do not use the device for a long time. We do not assume liability for damage caused by leaked batteries.
- Do not expose the battery to extreme heat, such as for example sunlight, radiators, fire, etc.
- The batteries, even those free from heavy metals, must not be disposed of as domestic waste. Used batteries must be discarded in used battery collection containers found at commercial or public waste management services.

## Notes:

- Do not connect any other equipment while the device is switched on. Switch off the other devices as well before connecting them.
- Only plug the device into the mains socket after you have connected the external devices. Make sure the power adapter is freely accessible.

## RF Exposure Warning

- This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

# OVERVIEW

---

## Controls and sockets

See the figure on page 3.



Press briefly to switch on the device, press longer to switch off the device

In operating: Select the input sources.



Decreases the volume.  
The symbol of the button illuminate, if the device is switched on.



Increases the volume.  
The symbol of the button illuminate, if the device is switched on.

### iPod dock

Connect the iPod/iPhone.



Bluetooth indicator;  
flashing blue - Blue tooth pairing mode;  
illumine blue - Blue tooth connection mode.

### DC IN 12V



Socket for the mains adapter cable.

### AUX IN

Audio signal input (ø 3.5 mm) for connecting an external device.

## Remote control buttons



Switches the device on from standby mode and back off again.



Select the input sources.



Adjusts the volume.



Press briefly to select the previous or next track;  
press and hold down to start a forward or reverse search.



Starts playback and switches between play/pause.



Mutes the speakers and unmutes them again.

# CONNECTION AND PREPARATION

---

## Connecting the power adapter

### Note:

- Check that the mains voltage on the power adapter corresponds to your local mains supply.  
If this is not the case, contact your specialist dealer.

- 1 Connect the single plug of the power adapter into the »**DC IN 12 V**« socket.
- 2 Connect the power adapter into the wall socket.

### Caution:

- The device is connected to the mains with the power cord. Pull out the power adapter if you want to completely disconnect the device from the mains.
- Make sure the power adapter is easily accessible during operation and not hindered by other objects.

## Activate the remote control battery

- 1 Remove protection film from the battery compartment.
  - The remote control is now functional.

## Change remote control battery (Type CR 2025)

### Note:

- If your device no longer responds to the remote control commands, the battery may be dead. It is imperative that dead batteries be removed. We do not assume liability for damage caused by leaked batteries.

### Caution:

- Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type.

- 1 Hold the remote control with the back side facing up.
- 2 Unscrew safety bolt of the battery holder and remove the battery holder.

- 3 Insert the battery with the positive pole facing upwards.
- 4 Push battery holder into the remote control until it clicks into place.
- 5 Screw in the safety bolt.

## Connecting the iPod/iPhone

### Note:

- Switch the device off before you connect Pod/iPhone.

- 1 Insert the iPod/iPhone into the »**iPod dock**« connector carefully until it latches into place.

## Connecting external devices

### Note:

- Switch the device off before you connect external devices.

- 1 Use a standard audio adapter to connect the audio outputs of the external device to the »**AUX IN**« (ø 3.5 mm) socket of the GSD 320.

# IPOD/IPHONE MODE

## Made for iPod/iPhone



"Made for iPod/iPhone" means that an electronic accessory has been designed to connect specifically to an iPod/iPhone, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

### Notes:

- The device is able to recharge the internal battery of your iPod/iPhone. In standby mode, the device cannot recharge iPod/iPhone because of minimised power consumption. If you need to recharge your iPod/iPhone, please power up the device.
- Your iPod/iPhone will use its backlight settings as configured. If these need changing, use the settings menu on your iPod/iPhone.
- Using the buttons of the remote control and the menus of the iPod/iPhone, you can select the existing structures (Playlists, Artists, Albums, etc.) and tracks.

## Supported iPod/iPhone models

The software is made to support the following iPod/iPhone models:

- iPhone 5
- iPod touch (5th Generation)
- iPod nano (7th Generation)
- iPad (4th Generation)
- iPad mini

## Playing the contents of an iPod/iPhone

- 1 Switch on the device from stand-by mode by pressing »⏻« on the remote control or press briefly »⏻« **M**« on the device.
- 2 Select the input source with »**M**«.
  - Playback starts automatically with the last played passage.
- 3 Adjust the volume with »-« or »+«.
- 4 Mute the volume using »🔇« on the remote control.
  - Deactivate mute, press »🔇« on the remote control again.
- 5 To pause playback, press »⏸«.
  - Continue playback by pressing »▶▶« again.

## Repeating the current track

- 1 During playback, press briefly »◀◀«.

## Selecting another track

- 1 During playback, press »◀◀« or »▶▶« repeatedly until the track is reached.
  - Playback of the selected track or file starts automatically.

## Searching for a passage within a track

- 1 During playback, press and hold »◀◀« or »▶▶« to move through the current file.
- 2 Release »◀◀« or »▶▶« when the passage has been found.

## Automatic shutdown

The device will automatically switch to Stand-by mode if no audio signal from iPod/iPhone is played for 15 minutes. For further using switch on the device again.

## Switch of

- 1 Press »⏻« on the remote control or press and hold the »⏻« **M**« button on the device for 2 seconds to turn off the unit.



## Bluetooth device compatibility

Your GSD 320 connects with all Bluetooth Devices that support the A2DP profile including the most smartphones, laptops and tablets.

## Pairing Bluetooth Device

- 1 Switch on the device from stand-by mode by pressing »« on the remote control or press briefly »« on the device.
  - The blue indicator will start blinking.
  - Now you can ready to pair your device with the unit.

- 2 Activate the Bluetooth function on the auxiliary Bluetooth device.

- 3 Start the search function on the auxiliary Bluetooth device.

### Note:

- Enter »0000« when your auxiliary Bluetooth Device asks for the PIN code.

- 4 When the auxiliary Bluetooth device is paired with your device, the unit will beep and the blue indicator will turn on steadily.

### Note:

- Your GSD 320 can only receive and play back the audio signal from one Bluetooth device; up to 8 devices can nevertheless be paired.

## Connecting a paired Bluetooth Device

### Notes:

- Auxiliary Bluetooth devices must only be paired once (depending on the auxiliary Bluetooth device).
- When leaving and then returning to the reception range of the GSD 320, the auxiliary Bluetooth device will pair with it automatically.
- The GSD 320 will only connect automatically with the last paired auxiliary Bluetooth device.
- If the auxiliary Bluetooth device is not detected, it must be reactivated via its menu.

## Play Audio signal from your Bluetooth Device

- 1 Begin playback on auxiliary Bluetooth device.

- 2 Select the input source with »«.

- The blue indicator illuminate.
- Playback starts automatically with the last played passage.

- 3 Adjust the volume with »« or »«.

### Note:

- The volume can also be adjusted from the auxiliary Bluetooth device.

- 4 Mute the volume using »« on the remote control.

Deactivate mute, press »« on the remote control again.

- 5 To pause playback, press »«.

Continue playback by pressing »« again.

### Notes:

- Keep in mind that unit has a 9 m Bluetooth wireless range.
- The volume controls on your Bluetooth Device work separately from the volume controls on the unit.

# BLUETOOTH MODE

---

## Disconnect the Bluetooth Device

- 1 Disconnect the Bluetooth Device via its menu.

## Automatic shutdown

The device will automatically switches to Stand-by mode if no audio signal from auxiliary Bluetooth device is played for 15 minutes. For further using switch on the device again.

## Switch of

- 1 Press »⏻« on the remote control or press and hold the »⏻ ⌘ M« button on the device for 2 seconds to turn off the unit.

# AUX MODE

---

## Play Audio signal from an external device

Alternative you can listen to the sound of a connected external device (e.g. a MP3 player) through your device.

- 1 Switch on the device from stand-by mode by pressing »⏻« on the remote control or press briefly »⏻ ⌘ M« on the device.
- 2 Switch on the external device and starts playback.
- 3 Select the input source with »M«.
- 4 Adjust the volume with »-« or »+«.
- 5 Mute the volume using »🔇« on the remote control.  
Deactivate mute, press »🔇« on the remote control again.

## Automatic shutdown

The device will automatically switches to Stand-by mode if no audio signal is played for 15 minutes. For further using switch on the device again.

## Switch of

- 1 Press »⏻« on the remote control or press and hold the »⏻ ⌘ M« button on the device for 2 seconds to turn off the unit.

## Technical data



This device is noise-suppressed according to the applicable EU directives. This product fulfils the European directives 1999/5/EC, 2009/125/EC and 2011/65/EU.

The type plate is located on the bottom of the device.

## CE declaration of conformity

The CE declaration of conformity for the device can be found as a PDF file on the Grundig homepage, [www.grundig.com/download/doc](http://www.grundig.com/download/doc).

## Power supply

Power Adaptor:

Model: AS360-120-AE300  
Input: AC 200 - 240V~ 50/60Hz  
Output: 12 V  $\overline{=}$ , 3 A

## Max power consumption

Betrieb: 36 W  
Stand-by: < 0.5 W

## Power Output

DIN 45324, 10% THD  
Output power: 2 x 10 W

## Dimensions and Weight

L x W x H: 318 x 195 x 172 mm  
Weight: 1.5 kg

Technical and design modifications reserved.

## Environmental note



This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling.

Therefore, do not dispose the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please consult your local authorities to learn the nearest collection point.

Help protect the environment by recycling used products

Grundig Intermedia GmbH  
Beuthener Strasse 41  
90471 Nürnberg

[www.grundig.com](http://www.grundig.com)  
72011 412 1200 13/50

AUS GUTEM GRUND

**GRUNDIG**