



- | | | |
|-----------------------------------|------------------------------------|-----------------------------|
| 1 TURN ON/OFF, Control LED | 4 Programme monitoring LEDs | 7 Half Load Button |
| 2 No Rinse-aid warning LED | 5 Programme selection knob | 8 TURN ON/OFF Button |
| 3 No salt warning LED | 6 START/ STOP/CANCEL Button | 9 Handle |

Function Buttons

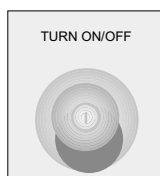


TURN ON/OFF Button

When you press the TURN ON/OFF button, the control LED is turned on at the on position and turned off at the off position.

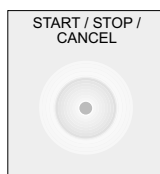


START / STOP / CANCEL Button

The programme you have selected starts as you push START/STOP/CANCEL button. LED is turned on at Start position, while it is turned off at Stop position. If you need to open the door due to any reason during the programme, press START/STOP/CANCEL button to stop the programme and restart the programme after closing the door.

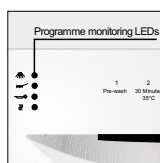


Monitoring the programme

The steps of the programme can be monitored during wash programme by the programme monitoring LEDs on the panel, with the exception that drying monitoring LED is never on during 30 minutes programme. START/STOP/CANCEL and Programme monitoring LEDs are off when the programme you selected ends.

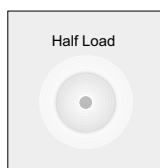

Half Load Button

To turn on your dishwasher with half load, place the dishes as you wish. First, push TURN ON / OFF button. Having selected the programme you prefer, push the Half Load button and see the LED on the button is on. Start the programme by pushing START/STOP/CANCEL button. Half Load choice enables you to use all parts of both the upper and lower baskets and thus you save power and water.

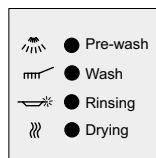

⚠️ **Drying monitoring LED is off during 30 minutes programme.**

⚠️ **To remove the water left on the washed items and in the dishwasher after rinsing and to protect the resin in the salt container, your dishwasher will stay for approximately 25 minutes in stand-by mode and then continue to work starting from drying phase and turn on the drying LED.**

⚠️ **The programme you have selected ends, when the START/STOP/CANCEL and Programme monitoring LEDs are off.**

Changing the programme

To change the programme as wash programme continues, press START/STOP/CANCEL button and see if the wash LED on the button is off.

Select a new programme.

Pushing START/STOP/CANCEL button, see the LED on the button is on. Newly selected programme will start.

⚠️ **The new programme will continue from where the cancelled programme is stopped.**

Cancellation of the Programme

To cancel as the programme continues; push the START/STOP/CANCEL button and see the LED on the button is off. Keep pushing START/STOP/CANCEL button for 5 seconds. Stop when the LED on the button flashes. The water in the dishwasher will be drained within 45 seconds. The programme will be cancelled, when the LED on START/STOP/CANCEL button is off. Then you can select a new programme and start again.

⚠️ **There may be residues of detergent or rinse-aid in the dishwasher and/or on the washed items depending on the phase where you have cancelled the programme.**

⚠ The programme you have selected ends, when the START/STOP/CANCEL and Programme monitoring LEDs are off.

Operation of your Dishwasher

- Open the tap.
- Plug the dishwasher.
- Open the door.
- Load the dishwasher.
- Check whether the upper and lower fan blades can turn freely.
- Put sufficient amount of detergent in the detergent container and close the door.
- Push the TURN ON/OFF button, see the LED on the programme selection knob is on.
- Add salt and/or rinse-aid if needed after checking the No Salt and No Rinse-aid warning LEDs.
- Select your wash programme with the help of Information on the Programme and Average Consumption Values Table.
- Select the wash programme by turning the programme selection knob.
- ⚠ Ensure the programme number on the programme selection knob aligns the TURN ON/OFF control LED.
- Start the programme pressing START/STOP/CANCEL button, see the led on the button is on.
- You may keep the button you press inserted to avoid your children to change the programme you have chosen. The position of the button e.g. whether it is in or out will not effect the programme flow.
- ⚠ Ensure not to open the door as the dishwasher works. If you need to open, the safety system will activate and stop your dishwasher. Be careful of the steam to come out, when you open the door of your dishwasher. The wash programme will continue, when you close the door.
- ⚠ To remove the water left on the washed items and in the dishwasher after rinsing and to protect the resin in the salt container, your dishwasher will stay quiet for approximately 25 minutes in stand-by mode and then continue to work starting from drying phase and turn on the drying LED.
- The programme you have selected ends, when the START/STOP/CANCEL and Programme monitoring LEDs are off.
- Turn off your dishwasher by pushing TURN ON/OFF button.
- Close the tap.
- Unplug the dishwasher.

Information on Programme and Average Consumption Values Table

Programme no:	1	2	3 Reference	4	5
Programme title:	Pre-wash	30 Minutes	Economy	Normal	Intensive
Wash temperature	-	35°C	50°C	60°C	70°C
Type of leftovers on the dish	-	Not-dried Coffee, milk tea, cold meats, vegetables	Not-dried Coffee, milk tea, cold meats, vegetables	Not-dried soups, sauces dough egg, rice potato and oven roastings	Soups sauces dough egg rice and potato and oven meals roastings
Level of dirt	-	Less dirty	Moderate	Moderate	Too dirty
Detergent Amount A=25 cm ³ / 15 cm ³ B=5 cm ³	Do not use detergent	A	A+B	A+B	A+B
Programme Flow	Pre-wash ▼ End	35°C Wash ▼ Cold rinse ▼ Hot rinse ▼ Drying ▼ End	Pre-wash ▼ 50°C Wash ▼ Cold rinse ▼ Hot rinse ▼ Drying ▼ End	Pre-wash ▼ 60°C Wash ▼ Cold Rinse ▼ Hot Rinse ▼ Drying ▼ End	50°C Pre-wash ▼ 70°C Wash ▼ Cold Rinse ▼ 50°C Rinse ▼ Hot Rinse ▼ Drying ▼ End
Duration of programme (minutes)	14	30	150	100	115
Power Consumption (kW/h)	-	0,78	1,05	1,26	1,65
Water Consumption (liter)	4,2	11,8	15	15,8	17,5

Average consumption values are valid for 15°C water inlet temperature.
The pre-wash programme is for rinsing through the dishes that are kept in the dishwasher for a few days.

Values given with the markings on the product or on other printed document provided with the product are obtained in laboratories according to relevant standards. The values may vary according to operational and environmental conditions.

arçelik

050 E

Dishwasher

***OPERATING
MANUAL***



**This product,
is manufactured in modern plants
without causing any harm
to the nature.**

been manufactured in sophisticated premises through the meticulous quality assurance procedures
best possible performance. Please carefully read this Operation Manual and keep it in safe place for

elik



Start with Your Dishwasher / Features **Page 4**

Features.....	5
Features.....	5

General and Safety Information **Page 6**

.....	6
Safety.....	6
Safety.....	6
Information.....	7
Energy and Water.....	7
Objects to avoid for washing.....	7

Normal Usage **Page 8**

How to Use the Dishwasher **Page 8**

.....	9
Connections, Water Inlet.....	9
Drainage Hose Inlet.....	9
Hot Water Output.....	10

How to Use the Dishwasher for Large Loads **Page 10**

Use the Dishwasher.....	10
-------------------------	----

6 Water Softener **Page 10**

Function of Water Softener.....	10
How Does the Water Softener Operate.....	10
Filling the Salt.....	10

7 Adjusting the Water Softener System **Page 12**

Eliminating the Water Hardness.....	12
Test Strip.....	12
Water Hardness Level Adjustment Table.....	13
Regeneration Adjustment Switch.....	13

8 Using Detergent **Page 14**

“Two-in-One”, “Three-in-one” Detergents.....	14
Filling the Detergent.....	14

9 Rinse-aid **Page 15**

Dosing the Rinse-aid.....	15
---------------------------	----

10 Loading the Dishwasher **Page 16**

Lower Basket, Folding Plates.....	16
Divided Cutlery Basket.....	17
Multi Purpose Height Adjustable Service Basket.....	18
Bottle Rods.....	18
Upper Basket Glass Support Rod.....	19
Height Adjusted Rack.....	19
Adjusting the Height of the Basket.....	19

**Dishwasher Loading and
Installation Information** **Page 18**

.....18
Rinse - aid.....18
Programme.....18

Use and Cleaning **Page 19**


.....19
.....20
.....20

Calling Call Center **Page 21**

Dishwasher does not work21

Familiar with Your Dishwasher / Technical Features

with Rack
Track
Adjustment Switch
ades
Lid
t
ade Slot
ntainer
ade
l
es

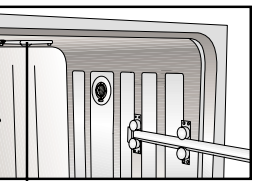

15

ades

designed for more effective wash of your

Features

: Standard dinner set for 12 persons
: 85 cm
: 60 cm
: 57 cm
: 52 kg

Power input : 220V, 50Hz
Total power : 2200 W
Heating Power : 2000 W
Current : 10 A
Pumping Power : 125 W
Drainage Pumping Power : 35 W

right to introduce any change in technical details or design without giving any previous notice due to our
dies during production.

years (time period to reserve necessary spare parts in order to preserve the functionality of the

with the Standards and Test Information / EU Conformance Declaration

manufacturing and sales of this machine are done in compliance with the safety rules covered by all relevant
e European Union.

336/EC, 93/68/EC, IEC 436/DIN 44990, EN 50242

Warnings and Safety Information

To protect the environment. Certain parts of your dishwasher are made of recycling materials. Please refer to the recycling symbol on these materials, for more information about the material. (>PE<, PE). It is not correct to dispose these material. Instead they should be handed over to the responsible centers. Please, contact responsible centers and take information on disposal methods.

Safety

Installation done by a licenced electrician. The manufacturer shall not be responsible for any possible damage to be caused by operation without correct installation.

If your fuse is less than 16 Ampere, get a new one. It must be connected by a licenced electrician.

The dishwasher is suitable to work on 220-240 Volt. Let the capacity of 110/220 Volt and 3000 Watts. It must be connected between, if the mains supply at your location is 220-240 Volt.

The dishwasher should not be plugged, while installation.

Use the power extension cord.

Use the grounded plug provided with the dishwasher.

Keep the detergents far from the reach of the children and fill in the detergent container just before operating the dishwasher.

Water in your dishwasher is not drinkable. Therefore, do not let children play around the dishwasher when the door is open.

When the dishwasher is installed, make sure that the socket of the plug is at a reachable point.

When you intend to plug off, only pull back by the plug. Never pull by the cord.

Children's Safety

After unpacking the dishwasher, make sure that the packing material are not placed at the reach of children. Children should never play on or with the dishwasher.

Do not let children to play around the dishwasher, when the door is open and do not let them sit on the door.

To prevent possible injuries, either place the long and sharp items like service fork, bread knife with the sharp ends down always in the cutlery basket or place them horizontally on the baskets.

Dishwasher detergents contain irritating and wearisome substances. Thus, it may cause burning and scalding in mouth, eyes and throat.

Information

is designed only to wash dishes.

Do not use flammable chemicals in the dishwasher to avoid fire or explosion risk.

Do not use the dishwasher and packing materials together. Please, make sure the dishwasher does not cause any danger to children. To avoid that the children may get locked in old models, to get rid of such troubles, we kindly advise you to disconnect the main power cord and break the lock mechanism to prevent it from getting locked.

Do not pull the upper and lower baskets out completely, as the dishwasher carries all the load of the door. Otherwise, do not put other loads on the door. The dishwasher may overturn.

Do not open the door, after you finish your washing cycle.

Do not touch the door, as the dishwasher is still hot. Be careful of the steam to come out when you open the door.

When the dishwasher is installed, the connections should be checked.

While installing your dishwasher, make sure the control panel do not lean on any place (tap, wall, etc.). Pay attention to choose the best place to install the dishwasher which you will not later need to change.

Operate the Pre-wash programme, at first usage.

Our authorised service is not responsible for any damage or arrangement on your power and sanitary installations. Do call our authorized service for installation and first operation after you get your power and sanitary installations arranged and/or renewed as appropriate for your dishwasher. Do not place in your dishwasher unsuitable dishware. Furthermore, do not fill in the baskets more than their capacity. Otherwise, our company shall not take any responsibility for possible scratches and rust to be caused by the movements of the baskets on the inner walls of your machine. Never put anything else other than the Detergents and Rinse-aid produced for your dishwasher in the Detergent and Rinse-aid container of your dishwasher. Otherwise our company shall not take any responsibility for any possible defects on your dishwasher.

Saving Energy and Water

Clean off all the leftovers from your dishes before placing them to the dishwasher. Operate the dishwasher when it is completely loaded. Use the Pre-wash programme only when really needed. While selecting the programme, pay attention to the information on the programme and average consumption values table.

Unsuitable objects to avoid for washing

Never wash the dishes having smoke ash, wax, polish, paint, chemical substance on in your dishwasher. Iron alloyed items can get rusty when they are washed in the dishwasher.

on the other items.
s, spoons and knives with wooden or
ms with adhesives, plastic items that are
t, cooper and tin pots in your dishwasher.
nd wash, fading and darkness may occur
e prints of the porcelaines, aluminiums or
ain fine glass types and crystals may
arency during the time. We kindly
to be careful to buy your future dishes
re suitable to wash in the dishwasher.

cave dishes such as pots, glasses,
e down in the dishwasher in order to avoid
on in these cavities and hollows.

first usage

ontrol activities at the manufacturing stage
me water left in your dishwasher which
to your dishwasher.

in your dishwasher more than its capacity
ose items that are stated in this manual.
d repair works of your dishwasher should
ut by the authorised service. Any repair
d out by other persons may lead to a
e your dishwasher to get out of the scope

water and power connections of your
made according to the instructions in the
of this manual. Fill in 1 liter water in salt
dishwasher before first usage.

4 Locating the Dishwasher

Check your dishwasher in terms of any damage caused during transportation. Do not use a damaged dishwasher. Consult your manufacturer in the event of any doubt.

As determining the location of your dishwasher, make sure that you can easily place the dishes in the dishwasher. Moreover, pay attention to choose a location where you can easily take out and arrange the dishes. Avoid to locate the dishwasher at a place where the room temperature possibly get under zero.

Locate the dishwasher close to the tap and outlets. The location of the dishwasher should be chosen considering that the location shall not be changed after the connections are made.

Before installation, follow the warnings on the packing while unpacking the dishwasher.

During installation, pay attention not to damage the floor, walls and pipes etc. Do not hold the dishwasher by the door or panel for moving the dishwasher.

While locating, pay attention to leave some place at all sides of the dishwasher to be able to move easily forward and backward during house cleaning.

While placing the dishwasher, ensure the water inlet and outlet pipes are not get congested. Furthermore, pay utmost attention not to crush power cords by the machine.

The dishwasher should be placed on a level ground and the door should be closed appropriately and tightly.

o the machine stands exactly vertical and

sher is located vertical and straight, the
erlap the inner wall or the frame.

st by the legs until the dishwasher is
ht, if the door of the dishwasher is not

has an earthed plug which must be
thed socket of proper voltage and current..
installations made by a certified
company shall not be responsible for any
onal damage to be caused by operation

our fuse in house is less than 16 Ampere,
6 Ampere connected by a licenced
fuse with 16 Ampere connected by a
an.


you need to replace the power cord,
orised service only. For safety purposes,
ine when the wash programme ends.

ns, Water Inlet

he sanitary installation of your house is
install a dishwasher. Moreover, we
stallation of a filter at the entrance of your
ent so as to prevent any harm to your
caused by the dirt (sand, clay, rust etc.)
mains or your sanitary installations and
omplaints like fading and residue after

Connecting Hose Inlet

Please do not use the water inlet hose of your previous dishwasher if available. Instead, use the new water inlet hose provided with your dishwasher.

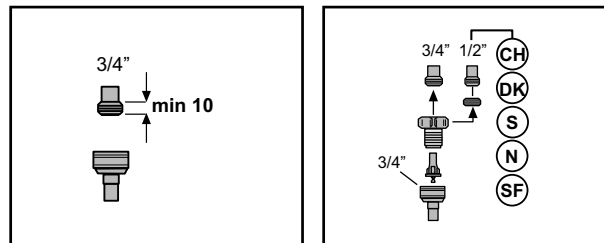

For safety purposes, make sure that you close the water inlet tap, when the wash programme ends. Connect the water inlet hose directly to water inlet tap. The pressure coming from the tap should be at least 0.3 bar and 10 bar at most. If the water pressure is more than 10 bars, insert a pressure decreasing valve in between.


The tap should be opened to the end after the completion of the connections and the impermeability should be checked.

For safety purposes, make sure that you close the water inlet after the completion of the wash programme.

s, Water Outlet

er drainage hose to the waste water pipe
In order to prevent disconnection of the
hose as your dishwasher is operating,
water outlet pipe tightly. Water outlet pipe
connected to the drainage, it should have no
leakage water.

can directly
the water outlet
let of the
connection
at 50 cm high
and 110 cm
drainage hose
ers shall lead

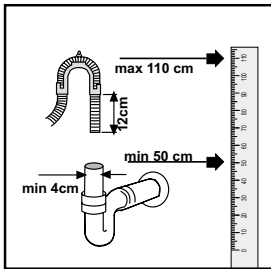

ng the Dishwasher for age

e Dishwasher

location to install your dishwasher. Also
to install your dishwasher at a safe and

ess of the surface can be balanced by
ewed legs. The doors shall be closed
e dishwasher is installed correctly.
ainage connections should be left loose
event any bending or jam.
ner should not be operated at a room
under 0 °C.

6 Water Softener

There is a special salt container in the dishwasher which decreases the hardness of the water.

Function of Water Softener

A dishwasher needs soft water. If the hardness of the water is higher than 6°dH, it should be softened and the lime in it should be decreased. Otherwise, ions causing the hardness shall accumulate on the items which may have an adverse effect on washing, shining and drying performance of the dishwasher.

How Does the Water Softener Operate?


As the water passes through the softening system, the ions causing hardness are eliminated and water gets the proper softness to give the best result of washing. According to the degree of hardness of the water, the ions causing hardness collect quickly in water softening system. In order to get the same performance at the next wash, therefore, the softening system should be refilled. This is the objective of using the dishwasher salt. Such kind of salts are developed by detergent manufacturers for use in house type dishwashers.

Filling the Salt

Please use only a special softening salt produced for use in the dishwasher. (The salt warning LED shall get off, after first fill of the salt container of the dishwasher.) In order to fill in softening salt, first pull out the lower basket and open the lid of the salt container by turning it anti clockwise **A B**.

Insert a funnel in the container **D**. When you fill in the container put the lid on and close tightly. You can fill up to 2 kg of softening salt in the salt container.

Do not overfill the salt container, do not completely fill in the container. We recommend you to use softening salt without particles or powder. Never use other types of salts that do not dissolve in water such as table salt. The dishwasher may become non-functional by the time. As you turn on your dishwasher, the salt container shall be empty. Thus, fill in the softening salt before you turn on your dishwasher. In order to find out whether the softening water is enough or not, check the No Salt warning LED on the panel. When the indicating LED on the panel you should refill the salt container.

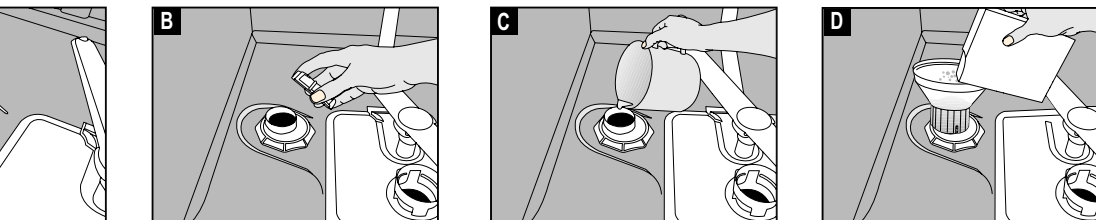



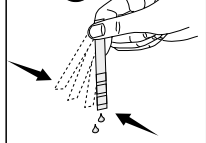

Do this only before first operation **C**.

In order to start any washing programme immediately after adding some salt, do pre-wash or select a programme that the salt spilled out in the dishwasher shall be dissolved and discharged.

Setting the Water Softener System

Water Hardness



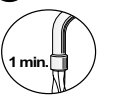



The performance of your dishwasher is subject to the softness of the water. For this reason, your dishwasher is designed with a system to decrease the hardness of the water coming from the mains. When this system is adjusted, the performance will increase. In order to adjust the system, find out the degree of hardness of the water coming from the mains by applying the following instructions for test band provided with your dishwasher.


b  1 min.	c  1 second	d 	e  1 minute	f <table border="0"><tr><td>Level 1</td><td></td><td>No Lime</td></tr><tr><td>Level 2</td><td></td><td>Low lime content</td></tr><tr><td>Level 3</td><td></td><td>Lime content</td></tr><tr><td>Level 4</td><td></td><td>Medium lime content</td></tr><tr><td>Level 5</td><td></td><td>Lime content</td></tr><tr><td>Level 6</td><td></td><td>High lime content</td></tr></table>	Level 1		No Lime	Level 2		Low lime content	Level 3		Lime content	Level 4		Medium lime content	Level 5		Lime content	Level 6		High lime content
Level 1		No Lime																				
Level 2		Low lime content																				
Level 3		Lime content																				
Level 4		Medium lime content																				
Level 5		Lime content																				
Level 6		High lime content																				
Let water to flow from your tap for 1 min.	Dip the test strip into water for 1 second	Take the test strip out of water and shake it.	Hold on for 1 minute	Set the water hardness of your dishwasher according to the result shown by the test strip.																		

If you change the location, the level of water hardness will possibly be changed. It is essential to check the water hardness in order to obtain optimum washing efficiency.

When the hardness adjustment is carried out for your dishwasher, the latest water hardness value shall be shown on the dishwasher for approximately about 5 seconds. Since the Programme Selection Knob is at position 1, the test strip indicates level 1 on the panel. Carry out new hardness adjustment of your dishwasher (according to the hardness level of the water at your tap), by means of changing the position of the programme selection knob.

Hardness & Regeneration settings

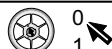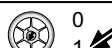German degrees dH	French * degrees dF	Regeneration settings	Position ** of Programme Selection Knob	Hardness Level indicator
0-5	0-9		1	● Pre-wash LED on the panel is on.
6-11	10-20		2	● Wash LED on the panel is on.
12-17	21-30		3	● Rinsing LED on the panel is on.
18-22	31-40		4	● Drying LED on the panel is on.
23-34	41-60		5	● Pre-wash, Wash, Rinsing, Drying LEDs on the panel are on at the same time.
35-60	61-107		5	● Pre-wash, Wash, Rinsing, Drying LEDs on the panel are on at the same time.

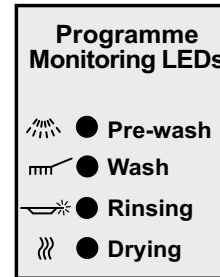

If the water you use is more than 107°dF (French Hardness) or if you are using pit water, we recommend that you use filters and

If the water hardness is below 9F (French hardness), you do not need to use special dishwasher salt in your machine. In this case, salt indicator light (if available) will not light up continuously.

If the Programme Knob has 1 / 2 / 3 / 4 positions, you can set the hardness level by turning it to position 5 after the last position clockwise.

High Lime Content Adjustment Switch



 High Lime Content

If the water hardness level is 6 (high lime content), turn the High Lime Content Adjustment switch on position 1 after setting the hardness level. After turning the Programme Knob on position

- Set the programme selection knob on position 1, as your dishwasher is turned off.
- Turn on your dishwasher pushing START/STOP/CANCEL button and then push TURN ON/OFF button and take your hands off from the TURN ON/OFF button.
- Keep pushing START/STOP/CANCEL button for 10 seconds.
- Changing the position of programme selection knob, you can change hardness adjustment levels according to the table below.
- Having selected the level of hardness, push the START/STOP/CANCEL button once more to record the selected adjustment to the memory.
- Turn off your dishwasher by pressing TURN ON/OFF button.

Detergent

Use only the detergents specially produced

the detergent, keep your detergent at a
where your children can not reach.

in the detergent container before you
washer.

detergent may lead to non-dissolution of
which may create scratches on the glass

are divided into two groups as including
n-including phosphate. Both of them can
dishwasher.

compact powders normally do not include
ce phosphate has a softening effect in
mend you to use salt if the hardness of
when you are using detergent of such type.
osphate detergent is used in a region
ess of the water is high, white spots may
shes and glass items. You should use
to prevent this.

t of the non-chlorine detergents is lower.
spots may not be completely cleaned. In
this, you should use a high-temperature
e or a detergent including chlorine.

information on the detergent you are using,
contact the detergent manufacturers.

formed detergents, please see information
r instructions on the package of the
where on the dishwasher you should put
gent container, basket etc.).

“Two-in-one” or “Three-in-one” Detergents

Generally, detergents including rinse-aid and/or softener
can only give good results under certain using conditions.

Such detergents include rinse-aid and/or softener in
standard, formerly amounts. Therefore, it is not possible
to carry out water softening and rinse-aid amount adjustment
according to the hardness of the water in your house. For
use of such detergent, you should get in contact with the
manufacturing companies of your detergent and learn the
proper using conditions.

If you are not satisfied with the result of a washing and/or
drying with a given “Two-in-one” or “Three-in-one” detergent,
contact the manufacturer of the detergent. The Guarantee
of your dishwasher does not cover complaints caused by
the use of such detergents.

Filling the Detergent


To open the lid of the detergent container, push the latch
to right **A**.

There are level indicating lines in the detergent container.
The total capacity of detergent container is 40 cm³. Using
these lines, you can determine the correct amount of
detergent to be filled **1**.

If your dishwasher is completely full or your dishes are
very dirty, use level 25cm³; if it is not completely full or your
dishes are not so much dirty, use level 15cm³ **1**.

If your dishes are kept waiting for a long time before
washing, also fill in the detergent slot of 5 cm³ **2**.

be kept waiting for a long time and the dishes are dried, fill in 5cm³ more detergent container. You can see the correct amount in the Programme Information and Average Values Table for the wash programme you need to fill in more detergent depending of your dishes or water hardness level at

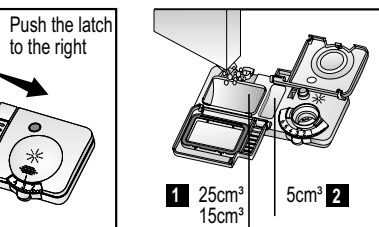

Rinse-Aid


Rinse-aid is a special chemical used to increase the shine or to prevent water marks or lime spots. The rinse-aid is used not to have the dishes more but to have them at sufficient drying of wash programme. Therefore, be sure to fill in the rinse-aid container and to use only the amount produced for dishwashers.

To open the rinse-aid container, open by pressing the latch of rinse-aid. Fill in the container up to level **MAX** and

Do not forget to close the rinse-aid container lid after filling in the rinse-aid container **3**.

Wipe and clean the rinse-aid spilled over the container. The rinse-aid spilled over by fault leads to foaming and thus decreases the washing performance.

By controlling the warning indicator on the control panel, you can decide whether to add rinse-aid or not **4**. The dark color of the warning indicator indicates that the rinse-aid amount is sufficient. If it is not dark colored, please add rinse-aid.

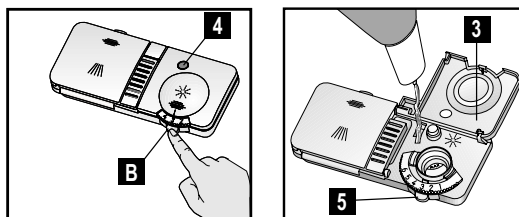

Dosing the Rinse-Aid

Rinse-aid doser can be adjusted to positions between 1 to 6. The factory adjustment is position 3 **5**.

If there are water streaks on the dishes after washing, the degree should be increased, while it should be decreased with the blue streaks that are erased by hand.

g the Dishwasher

ishes in a proper way, you get maximum
m your dishwasher in terms of power
washing and drying performance.

the dishwasher, sweep any residuals off
eeds etc.) on the dishes. There are two
s in your dishwasher for you to load your
dirty and large items on the lower basket
te and light items on the upper basket.
ave dishes such as pots, glasses,
e down in the dishwasher.



e to put long and narrow items on the
asket.

le injuries, either place the long and sharp
fork, bread knife always sharp ends down
asket or place them horizontally on the

asket

ates


of four parts provided on the lower basket
er are designed for big items such as
s etc. more easily **1 2 3 4**. You can
s by means of folding each part or all of
You can use the folding plates by raising
first and then leaning them **B** forwards.

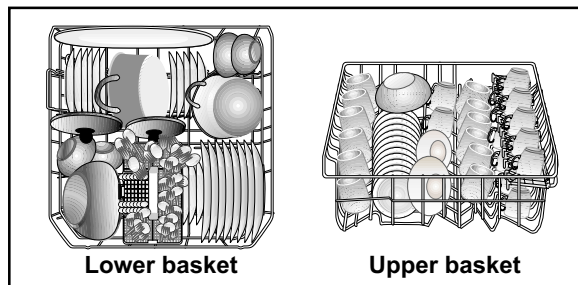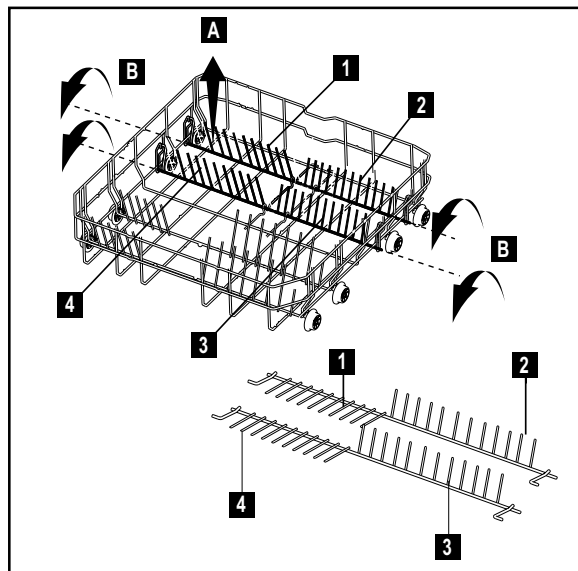


Alternative example to fill in the basket

Cutlery Basket

number of items and dirt type, divided cutlery basket part can be separated into three parts and smaller part can be placed on the upper basket **2**. To separate the cutlery basket, turn the latches under the handle smaller cutlery basket upwards and pull out the upper and lower latches **B**. To combine the parts again, in the order of separation process.

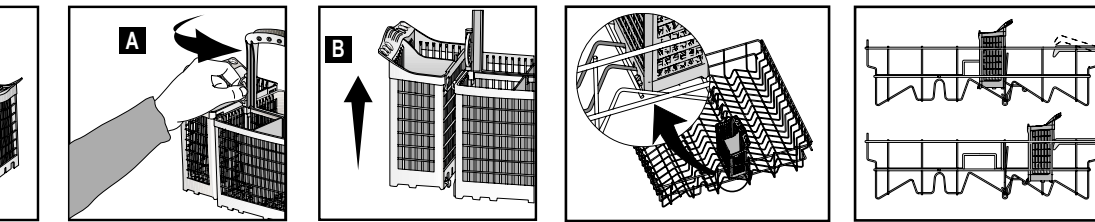




cutlery and soup ladle can not be placed to the upper basket in the cutlery basket. Such parts should be placed in the lower basket. For better washing and drying efficiency, usage of separators is recommended **3 4**. These parts should be used when not needed **C D**.

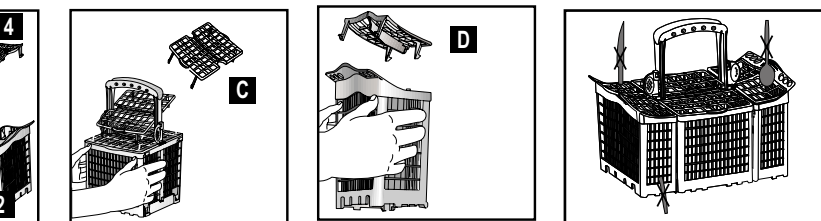





For big items like saucepan and tray, you can take out the cutlery basket.

Adjustable Height Basket

The adjustable height basket in your dishwasher's lower basket enables you to easily wash your extra glasses or the items like soup ladle

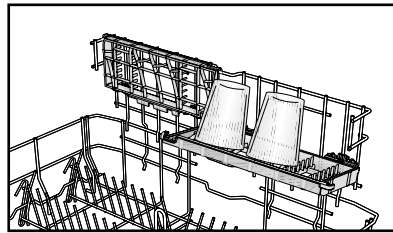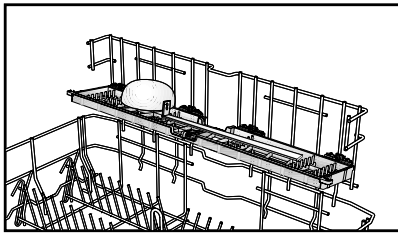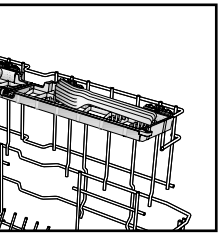

To use the adjustable height basket, fold the rack **A**. Slide up the rack **B**. Get the rack in vertical position **C**. Slide down the rack and lock it **D**. You can open the rack by following the reverse order of the process. To make the racks' height adjustable, fold the rack **E**. Slide up the rack **F**. Open the rack at the preferred level **G**. Make sure that the fan blades of the washers you have placed on the racks.

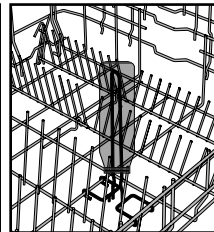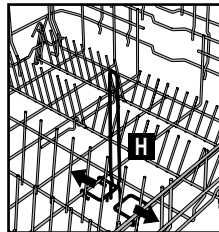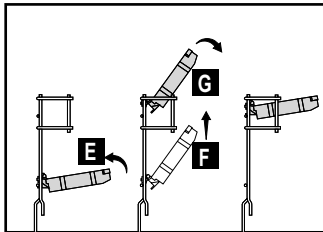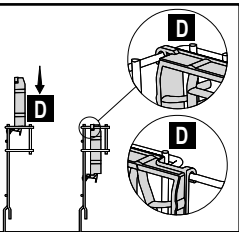

Adjustable Height Basket

The adjustable height basket is designed for easier washing of high items with wide mouth. In order not to use bottle rods, you can use the adjustable height basket **H** from the both sides

ket

Support Rods

For long glasses and wine glasses, do not lean them on other items but to the edge of the basket, to the glass support rod **1**. Be careful not to lean long glasses to each other since they can not stand still and may tip during washing.





Turn the support rod to the horizontal position **A B**.

Adjusted Rack


Use the adjusted racks on the upper basket of your machine which are easily adjusted by shifting up and down to fit the height of your glasses, cups and similar objects **C D E**.

Adjusting the Height of the Basket


The Loaded Basket Adjusting Mechanism on your dishwasher's upper basket enables you to create larger areas in your dishwasher's upper baskets by your needs without removing the basket from your dishwasher when your upper basket is loaded. The dishwasher's basket is adjusted to down position by default. To raise your basket **F** hold and raise up one side of the Loaded Basket Adjusting Mechanism (left or right). To raise the other part of the basket, do the same. To lower your basket, hold and **G** push down one side of the Loaded Basket Adjusting Mechanism (left or right) to get the lower position. To lower the other part of the basket, do the same process. Make sure that the both sides of the Loaded Basket Adjusting Mechanism are at the same position (up or high).

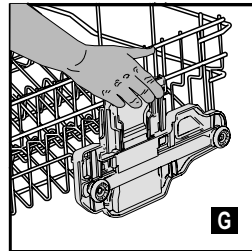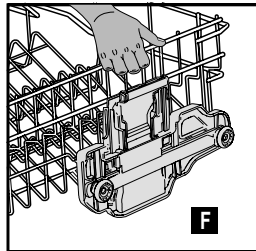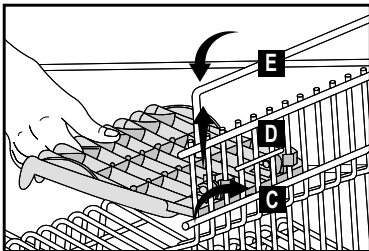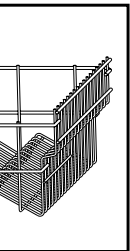

Standard Dishwasher Loading and Test Installation Information

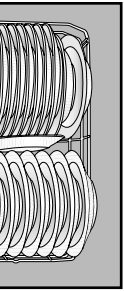

Lower basket

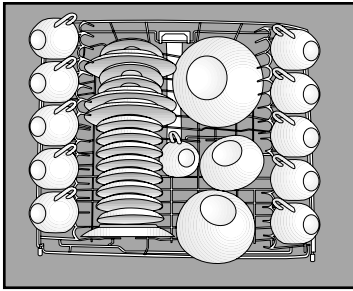


Upper basket


Two baskets: 12 different units. The upper basket is put to the lowest position for the standard test.

Rinse aid
 DIN 44990 IEC 436 as per (international norms)/Dosing of Rinse-aid: 5

Programme
 EN 50242 as per (international norms)

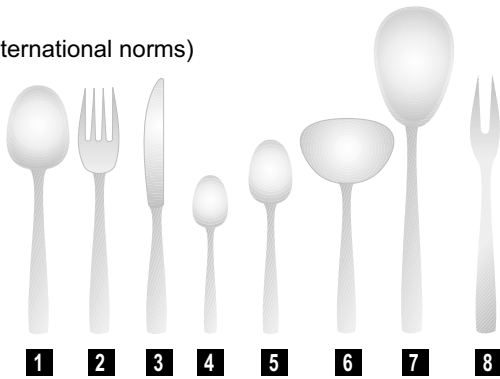

1 2 3 4 5 6 7 8

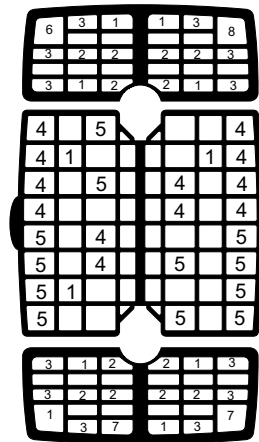

Performance and Cleaning

Dishwasher is cleaned at regular intervals, the performance will be extended and frequently occurring problems prevented. Clean the fan blades and filters every week.

Before using the dishwasher and close the tap before cleaning.

Clean the outer surface and door gaskets of your dishwasher with a soft cleaning material and damp cloth. The door gasket should only be rubbed with a slightly damp cloth. Do not use abrasive material for cleaning.

Clean the fan blades regularly so that your dishwasher works effectively. Check the coarse and fine filters for food debris accumulation. If there are leftovers, clean them and clean well under tap water.

Remove the separate filters in your dishwasher.

Remove the filter





To remove the micro filter and coarse filter group for cleaning, first turn it anti clockwise and take out the metal / plastic filter **B**. Later on, push the coarse filter to take out the coarse

Clean all three filters with a brush under tap water. Place the metal / plastic filter in its place. Place the coarse filter in the micro filter. Make sure that they are placed correctly. Turn the coarse filter clockwise until the „click“ sound is heard. It is essential to place the filters correctly.

⚠ The dishwasher should not be used without filter.

⚠ The wrong placing of the filters will decrease the washing performance.

⚠ Cleaning the filters is essential for proper operation of the dishwasher.

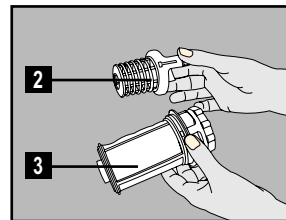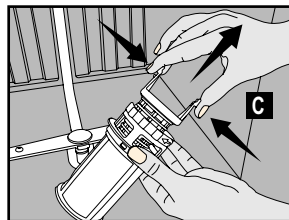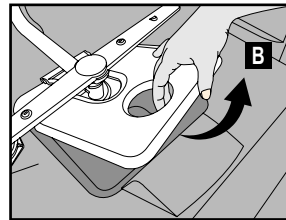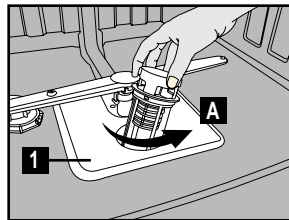


S

the holes of Lower **1** and Upper fan blades **2 3** are clogged or not. If there is a clog, take out and clean them. By pulling up lower fan blade **A B**,

the nuts of Upper and Top fan blades by means of turning the nuts to left. **C D**.

back the upper and top fan blades, make sure that the nuts are exactly screwed.

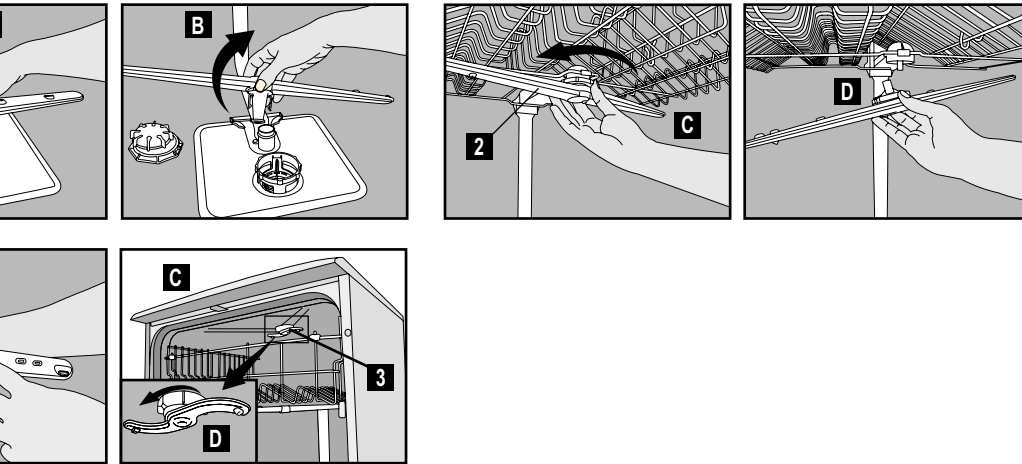

to your dishwasher to be caused by the dirt (sand, clay, rust etc.) coming from the mains or your
ions are hindered with the help of a filter. Check the filter and the hose sometimes and clean if
n the filter, close the tap first and take out the hose. After taking out the filter from the hose, clean
. Place the cleaned filter back in its place in the hose and connect the hose on its place.

What to do before Phoning the Call Center

Dishwasher does not work;

Check if the dishwasher is plugged or not.

Check if there are any power outages in your house.

Check if the water inlet tap is open.

Check if you closed the door of your dishwasher.

Check if you turned on the dishwasher by the TURN ON/ OFF button.

Check if the water inlet and the filters in your dishwasher are not clogged.

If the problem continues, phone the Call Center.