

BLUETOOTH SPEAKER

GSB 2000



FOR A GOOD REASON

GRUNDIG

CONTENT

3 SET-UP AND SAFETY

- 3 RF Exposure Warning
- 3 Important battery information Warning

4 OVERVIEW

- 4 Controls and sockets of the Bluetooth
Speakers
- 5 Bluetooth device compatibility
- 5 Controls
- 5 Sockets

6 CONNECTION AND PREPARATION

- 6 Connecting the power adapter
- 6 Charging the device
- 6 Connecting external devices
- 6 Charging a Bluetooth/USB Device

7 OPERATING

- 7 Bluetooth function
- 7 Disconnect the Bluetooth device
- 8 Logging on and connecting a mobile
telephone or a tablet PC (NFC standard)
- 9 Play Audio signal from an external device
- 9 Speaker phone
- 9 Power saving mode
- 9 Switch off
- 9 Demo-Modus

10 INFORMATION

- 10 Technical data
- 10 Environmental note

SET-UP AND SAFETY

Please note the following instructions when setting up the device:

- This device is designed for the playback of audio signals. Any other use is expressly prohibited.
- Make sure there is adequate ventilation when positioning the device. There must be a free space of at least 10 cm behind the device. Do not place objects on the ventilation slots.
- Do not cover the device with newspapers, table cloths, curtains, etc.
- Please note when deciding where to put the device that furniture surfaces are covered by various types of lacquer and plastic, most of which contain chemical additives. These may cause corrosion to the feet of the device, thus resulting in stains on the surface of the furniture which can be difficult or impossible to remove.
- If the device is exposed to sudden changes in temperature, for example when taken from the cold into a warm room, wait at least two hours before using it.
- The device is designed for use in dry rooms. Protect the device and the CDs from rain, moisture (dripping or splashing water) and heat (heaters or direct sunlight, etc).
- Only use the device in a moderate climate.
- Do not place any objects containing liquids (for example, vases) on the device.
- Do not place any objects such as burning candles on the device.
- Never open the device casing under any circumstances. No warranty claims are accepted for damage resulting from improper handling.
- Do not use any cleaning agent, as this may damage the casing. Clean the device with a clean, moist leather cloth.
- If malfunctions occur due to static electricity charges or brief mains voltage surges, reset the device with the reset button.
- Thunderstorms are a danger to all electrical devices. Even if the device is switched off, it can be damaged by a lightning strike to the mains. Always remove the mains plug during an electrical storm.

Note:

- Do not connect any other equipment while the device is switched on. Switch off the other devices as well before connecting them.
- Only plug the power adapter into the mains socket after you have connected the external devices. Make sure the power adapter is freely accessible.

RF Exposure Warning


- This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Important battery information Warning

- Your product contains a battery and charging system which is designed to work in temperatures that do not exceed 50°C. Leaving this product in a closed automobile or the trunk of an automobile where temperatures may exceed 50 C may result in permanent battery damage, fire, or explosion. Please remove your product from the automobile when you exit, do not place your product in the trunk of your automobile, and do not leave your product in any location where temperatures may exceed 50 C.

OVERVIEW

Controls and sockets of the Bluetooth Speakers

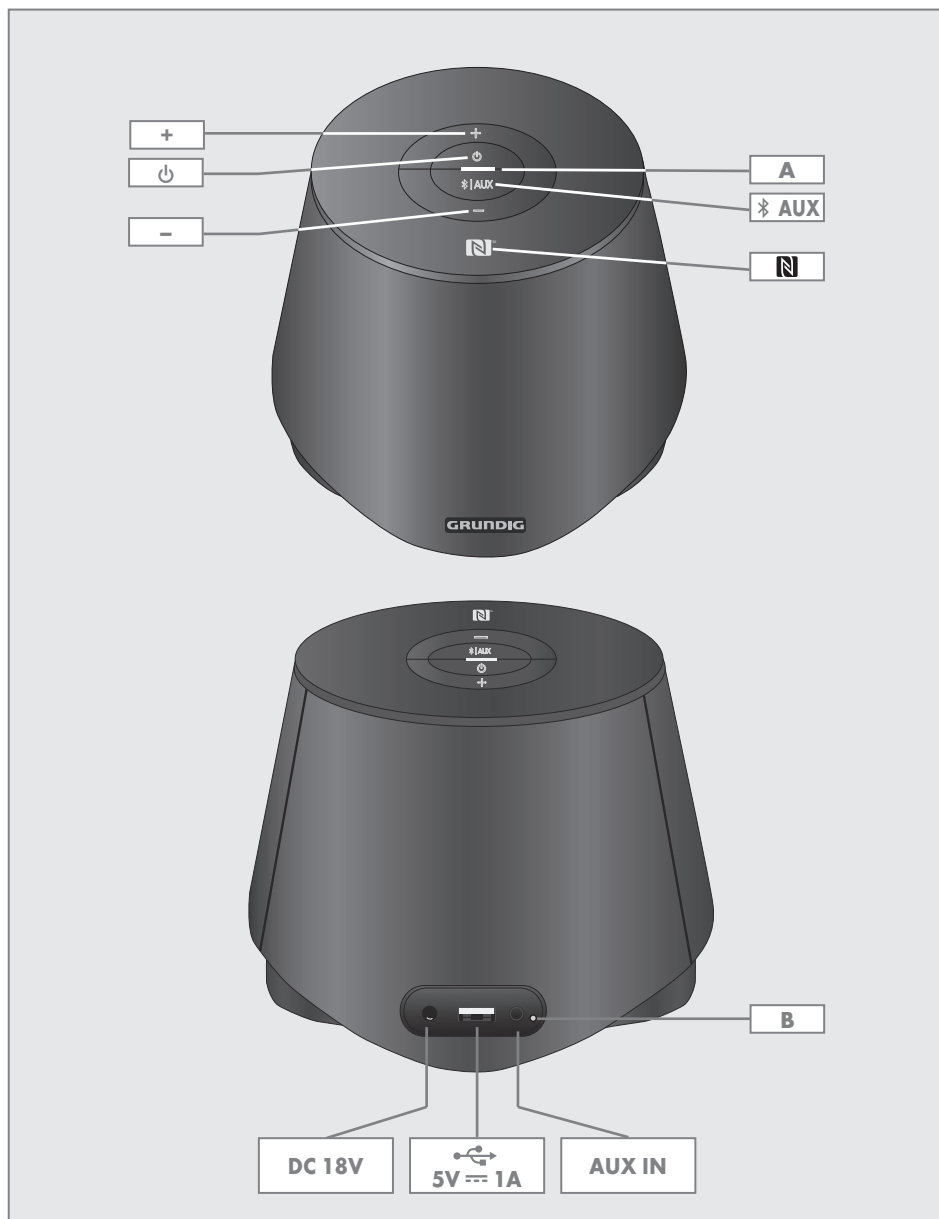






OVERVIEW

Bluetooth device compatibility

Your GSB 2000 connects with all Bluetooth Devices that support the A2DP profile including the most smartphones, laptops and tablets.

Controls

- Reduces the volume.
-  Switches the device in and out of standby mode.
- + Increases the volume.
-  Display lights up:
Red – Device is in standby;
Blue – Bluetooth mode;
White – Operating with external device;
Turquoise – Hands-free and demo sound.

Display flashes:
Red – Battery is low;
Yellow – Battery is charging;
Green – Battery is charged.
-  **AUX** Switches between Bluetooth mode and operating with an external device.
-  Position for NFC login (near field communication) of Smartphones and tablet PCs.
-  Reset button.

Sockets

DC 18V

DC IN socket for the power supply unit.



5V == 1A

USB interface for charging of a USB data medium.

AUX IN

Port for connecting an external device.

CONNECTION AND PREPARATION

Connecting the power adapter

Note:

- Check that the mains voltage on the type plate on the power adapter corresponds to your local mains supply. If this is not the case, contact your specialist dealer.

- 1 Connect the single plug of the power adapter into the »**DC 18V**« socket.
- 2 Connect the power adapter into the wall socket.

Caution:

- The device is connected to the mains with the power cord. Pull out the power adapter if you want to completely disconnect the device from the mains.
- Make sure the power adapter is easily accessible during operation and not hindered by other objects.

Charging the device

- 1 The power adapter to the device will automatically recharge the internal rechargeable battery.
 - The indicator flash "yellow" while the device is charging and turn to "green" when the device is fully charged.

Notes:

- Charge the unit for about 2.5 hours.
- When the device is "ON" and no connected to power source, the charging indicator flash "red", it means battery needs charging.

Using and maintaining your rechargeable battery

- The battery must be charged at least 2.5 hours prior to first use.
- For long period of storage, please recharge the battery at least once every two months to maintain the battery in optimum condition.
- Once the battery is fully discharged, immediately recharge regardless of whether you plan to use the battery or not in order to maximize battery life.

- Recharge efficiency will degrade when environmental temperatures drop below 5°C or exceed 35°C.

Warning:

- Do not expose the battery to temperatures in excess of 45°C.

Connecting external devices



Note:

- Switch the device off before you connect external devices.

- 1 Use a standard audio adapter to connect the audio outputs of the external device to the »**AUX IN**« (ø 3.5 mm) socket.

Charging a Bluetooth/USB Device

Your GSB 2000 include a USB port at the back. This allow you to charge a Bluetooth/USB Device using the GSB 2000.

- 1 Connect your Bluetooth/USB using the USB cable into the » **5V**  **1A**« socket.
 - The Bluetooth/USB Device will begin to charge.

Notes:

- The GSB 2000 switches off automatically after approx. 30 minutes.
- Power output of the USB port is 1 A. If your device require more power may not charge through this USB port.
- Charging function may not be support for all smartphones, tablets or electronic devices.
- Charge function is always enabled as long as the power adapter is plugged in and connected.



Bluetooth function

Pairing Bluetooth device

- 1 Switch on the device by pressing »⏻«.
 - The indicator »A« will start blinking blue.
 - Now you can ready to pair your device with the unit.
- 2 Activate the Bluetooth function on the auxiliary Bluetooth device.
- 3 Start the search function on the auxiliary Bluetooth device.
 - After a short time, the GSB 2000 will be displayed on the Bluetooth auxiliary device.
- 4 Select the GSB 2000 on the Bluetooth auxiliary device and connect to it.
- 5 When the Bluetooth auxiliary device connected to your device, a beep is emitted and the »A« display lights up blue.

Note:

- Although the unit can only stream audio from one device at a time, it is capable of being paired with up to eight devices.

Connecting a paired Bluetooth Device

Notes:

- You will only need to pair your Bluetooth device with the unit one time.
- The next time your Bluetooth device and the unit are in range of each other, and the Bluetooth feature is turned on, they will automatically connect.
- The unit will only automatically connect to the last Bluetooth Device it was connected to.
- If your paired device does not automatically connect, navigate to the Bluetooth menu on your device and select the unit from the list.

Play Audio signal from your Bluetooth device

- 1 Start playback on the auxiliary Bluetooth device.
- 2 Press »-« or »+« on the GSB 2000 to adjust the volume.
- 3 Stop playback on the auxiliary Bluetooth device.

Notes:

- Keep in mind that depending on the used Bluetooth device and the structural conditions the wireless range can be up to 9 m.
- The volume controls on your Bluetooth device work separately from the volume controls on the GSB 2000.

Disconnect the Bluetooth device

- 1 Switch off the Bluetooth function at the Bluetooth device.
 - The indicator »A« will flash blue.

Reconnecting the Bluetooth device

- 1 If you move out of range or turn off the Bluetooth feature on your device, the unit will disconnect from your device.
- 2 To reconnect, simply access the Bluetooth Manager on your Bluetooth device and select the GSB 2000.

Note:

- In case of the registered GSB 2000 cannot connect to the Bluetooth device again, please remove the GSB 2000 from the Bluetooth device list, search and connect again.

Out of Range or Lost Signal




If the Bluetooth device is out of range (beyond 9 m) of the unit or if there is something blocking the Bluetooth signal, the indicator »A« will flash blue to indicate that the Bluetooth connection with the Bluetooth device has been lost.

To avoid a lost connection


- 1 Move the Bluetooth device back into range (within 9 m), and/or make sure there's a clear line of sight between the GSB 2000 and the Bluetooth device.
- 2 If the connection is lost, the connection will need to be reestablished. Follow the directions under "Reconnecting the Bluetooth device".


Logging on and connecting a mobile telephone or a tablet PC (NFC standard)

As an alternative to the Bluetooth log on you can simply log on a mobile telephone or a tablet PC which conforms to the standard NFC (near field communication) on to your GSB 2000. Mobile phones and tablet PCs with appropriate hardware and software are suitable.

- 1 Switch on the device by pressing »«.
- 2 Select the Bluetooth input source by pressing » AUX« on the device.
 - The indicator »A« will flash blue.
- 3 Hold the mobile phone or the tablet PC on the »« marking on the top side of your GSB 2000.
 - The logging on process starts automatically.
 - If the mobile phone/the tablet PC was detected, a signal tone is emitted and the indicator »A« illuminates blue.

Note:

- The log on must be confirmed on the mobile phone/ tablet PC when doing so for the first time.
- 3 To log out hold the mobile phone / the tablet PC again over the »« marking on the top side of your GSB 2000.

™ is a registered trade mark of the NFC Forum, Inc., and is registered in the USA and other countries.

Play Audio signal from an external device

Alternative you can listen to the sound of a connected external device (e.g. a MP3 player) through your device.

- 1 Use a standard audio adapter to connect the audio outputs of the external device to the »AUX IN« (ø 3.5 mm) socket.
- 2 Switch on the device by pressing »⏻«.
- 3 Switch on the external device and starts playback.
- 4 Press »-« or »+« on the GSB 2000 to adjust the volume.
- 5 Stop playback on the external device.

Speaker phone

You can also use your GSB 2000 as a speaker phone for telephone conversations.

- 1 To accept a call, press »✆ AUX«.
- 2 To end a call, press »✆ AUX« again.

Power saving mode

The device switches off automatically if a signal is not available.

After 30 minutes when the power supply unit is connected; after approx. 10 minutes when the power supply unit is not connected.

- 1 Press »⏻« to switch on the device again.

Switching off

- 1 Press »⏻« to switch off the unit.
 - The display »A« lights up red.

Demo sound

You can use the demo sound to test the sound of your device.

- 1 Press »⏻« to switch on the device.
- 2 Press and hold down »⏻« for approx. 3 seconds.
 - The display »A« lights up turquoise..
- 4 Start playback of the demo sound by pressing »✆ AUX«.

Note:

- The demo sound automatically stops.

Technical data



This device is noise-suppressed according to the applicable EU directives.

This product fulfils the European directives 1999/5/EC, 2009/125/EC and 2011/65/EU.

The type plate is located on the bottom of the device.

CE declaration of conformity

You can find the CE declaration of conformity for the device in the form of a pdf file on the Grundig Homepage www.grundig.com/download/doc.

Power supply

Power Adaptor::

Input: AC 100 - 240 V~ 50/60 Hz

Output: 18 V  2 A

Max power consumption

Operation: < 35 W

Stand-by: < 0,5 W

Power Output

DIN 45324, 10% THD

Output power: 2 x 12,5 W

Dimensions and Weight

Ø x H 160 x 226 mm

Weight: 1.15 kg

Technical and design modifications reserved.

Environmental note



This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling.

Therefore, do not dispose the product with normal domestic waste at the end of its service life.

Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please consult your local authorities to learn the nearest collection point.

Help protect the environment by recycling used products

Grundig Intermedia GmbH
Beuthener Strasse 41
90471 Nürnberg, Germany

www.grundig.com
72011 412 2500 14/37

AUS GUTEM GRUND

GRUNDIG